


# **Nikon**

DIGITAL CAMERA

# D5500

## User's Manual

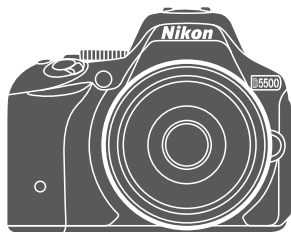

**Nikon Manual Viewer 2**

Install the Nikon Manual Viewer 2 app on your smartphone or tablet to view Nikon digital camera manuals, anytime, anywhere.

Nikon Manual Viewer 2 can be downloaded free of charge from the App Store and Google Play.

**En**

## D5500

### Model Name: N1405

For a complete guide to using your camera, see the *Reference Manual* (□ i). To get the most from your camera, please be sure to read this *User's Manual* thoroughly and keep it where it will be read by all who use the product.

### Symbols and Conventions

To make it easier to find the information you need, the following symbols and conventions are used:



This icon marks cautions; information that should be read before use to prevent damage to the camera.



This icon marks notes; information that should be read before using the camera.



This icon marks references to other pages in this manual.

Menu items, options, and messages displayed in the camera monitor are shown in **bold**.

### Camera Settings

The explanations in this manual assume that default settings are used.

### Nikon User Support

Contact a Nikon representative for technical assistance with the operation of your Nikon product or products. For information on the Nikon representatives in your area, visit

<http://www.nikon-asia.com/support>.



### For Your Safety

Before using the camera for the first time, read the safety instructions in "For Your Safety" (□ ix–xii).

## The Reference Manual

For more information on using your Nikon camera, download a pdf copy of the camera *Reference Manual* from the website listed below. The *Reference Manual* can be viewed using Adobe Reader or Adobe Acrobat Reader 5.0 or later.

- 1 On your computer, launch a web browser and open the Nikon manual download site at <http://downloadcenter.nikonimglib.com/>
- 2 Navigate to the page for the desired product and download the manual.

## ViewNX 2

Use ViewNX 2 to copy photos and movies to a computer, where they can be viewed, edited, and shared. ViewNX 2 is available for download from the following website:

<http://downloadcenter.nikonimglib.com/>

## Capture NX-D

Use Capture NX-D to fine-tune photos that have been copied to the computer and to convert NEF (RAW) images to other formats. Capture NX-D is available for download from the following website:



<http://downloadcenter.nikonimglib.com/>

### System Requirements and Other Information


For the latest information on Nikon software, including system requirements, visit the websites listed on page xvii.

## Package Contents

Confirm that the package contains the following items:

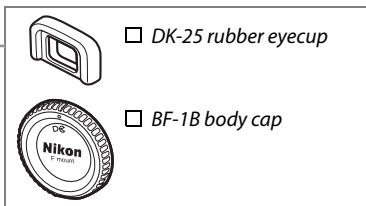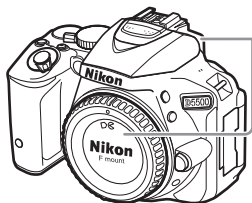

D5500 camera

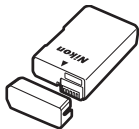

EN-EL14a rechargeable Li-ion battery (with terminal cover)



MH-24 battery charger (plug adapter supplied in countries or regions where required; shape depends on country of sale)

AN-DC3 strap

User's Manual (this booklet)

UC-E23 USB cable

Warranty


EG-CP16 audio/video cable

Purchasers of the lens kit option should confirm that the package also includes a lens. *Memory cards are sold separately* (📖 101). Cameras purchased in Japan display menus and messages in English and Japanese only; other languages are not supported. We apologize for any inconvenience this may cause.


# Quick Start Guide

Follow these steps for a quick start with the D5500.



- 1 Attach the camera strap ( 24).**  
Attach the strap as shown. Repeat for the second eyelet.

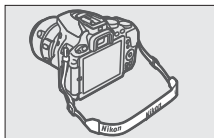


- 2 Charge the battery ( 24).**

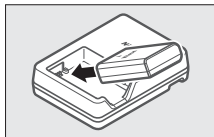


- 3 Insert the battery and memory card ( 25).**

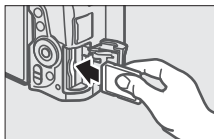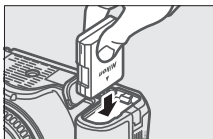


- 4 Attach a lens ( 26).**

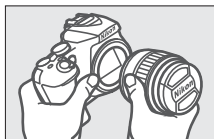

- 5 Open the monitor ( 7, 28).**

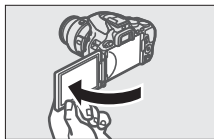


**6** Turn the camera on (📖 28).

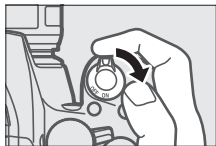


**7** Choose a language and set the camera clock (📖 29).


**8** Frame the photograph (📖 37).

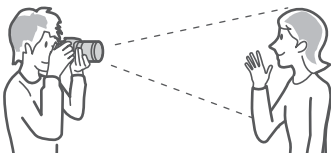


 
**9** Press the shutter-release button halfway (📖 37).

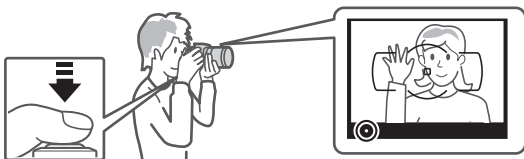

**10** Shoot (📖 38).

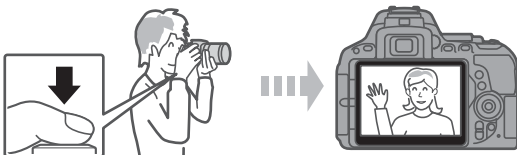

# Table of Contents

















|   |           |
|---|-----------|
| Package Contents.....   | ii        |
| For Your Safety.....  | ix        |
| Notices.....  | xiii      |
| Wireless .....  | xviii     |
| <b>Introduction</b>   | <b>1</b>  |
| <hr/>   |           |
| Getting to Know the Camera.....   | 1         |
| Using the Touch Screen.....   | 14        |
| First Steps.....  | 24        |
| <b>“Point-and-Shoot” Modes (AUTO and  and )</b> | <b>35</b> |
| <hr/>   |           |
| Framing Photos in the Viewfinder .....  | 36        |
| Viewing Photographs.....  | 39        |
| Deleting Unwanted Pictures.....   | 41        |
| Framing Photos in the Monitor.....  | 43        |
| Viewing Photographs.....  | 46        |
| Deleting Unwanted Pictures.....   | 47        |
| Recording Movies.....   | 48        |
| Viewing Movies.....   | 52        |
| Deleting Unwanted Movies.....   | 54        |

## Matching Settings to the Subject or Situation

### (Scene Mode)

**55**











---

|   |    |
|---|----|
|  Portrait.....         | 56 |
|  Landscape .....       | 56 |
|  Child .....           | 56 |
|  Sports .....          | 56 |
|  Close up.....         | 56 |
|  Night Portrait.....   | 56 |
|  Night Landscape ..... | 57 |
|  Party/Indoor .....    | 57 |
|  Beach/Snow .....      | 57 |
|  Sunset .....          | 57 |
|  Dusk/Dawn .....       | 57 |
|  Pet Portrait .....    | 57 |
|  Candlelight .....     | 58 |
|  Blossom .....         | 58 |
|  Autumn Colors.....    | 58 |
|  Food.....             | 58 |

### Special Effects

**59**

---
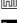
|   |    |
|---|----|
|  Night Vision .....        | 59 |
|  Super Vivid.....          | 60 |
|  POP Pop.....              | 60 |
|  Photo Illustration ..... | 60 |
|  Toy Camera Effect.....  | 60 |
|  Miniature Effect .....  | 60 |
|  Selective Color .....   | 61 |
|  Silhouette .....        | 61 |
|  High Key .....          | 61 |
|  Low Key .....           | 61 |
| Options Available in Live View .....  | 63 |



|  |           |
|--|-----------|
| <b>P, S, A, and M Modes</b>                  | <b>68</b> |
| Mode <b>P</b> (Programmed Auto).....         | 68        |
| Mode <b>S</b> (Shutter-Priority Auto).....   | 69        |
| Mode <b>A</b> (Aperture-Priority Auto) ..... | 69        |
| Mode <b>M</b> (Manual) .....                 | 70        |
| Exposure Compensation.....                   | 72        |
| <b>Restoring Default Settings</b>            | <b>74</b> |
| <b>Wi-Fi</b>                                 | <b>77</b> |
| What Wi-Fi Can Do for You .....              | 77        |
| Accessing the Camera .....                   | 78        |
| WPS (Android Only) .....                     | 79        |
| PIN Entry (Android Only).....                | 80        |
| SSID (Android and iOS).....                  | 81        |
| <b>Camera Menus</b>                          | <b>84</b> |
| Menu Options .....                           | 85        |
| Using Camera Menus .....                     | 89        |
| <b>ViewNX 2</b>                              | <b>92</b> |
| Installing ViewNX 2.....                     | 92        |
| Using ViewNX 2 .....                         | 93        |
| Copy Pictures to the Computer .....          | 93        |

|  |            |
|--|------------|
| <b>Compatible Lenses</b> .....                           | <b>95</b>  |
| <b>Other Accessories</b> .....                           | <b>97</b>  |
| Approved Memory Cards .....                              | 101        |
| <b>Caring for the Camera</b> .....                       | <b>102</b> |
| Storage.....   | 102        |
| Cleaning.....  | 102        |
| <b>Caring for the Camera and Battery: Cautions</b> ..... | <b>103</b> |
| <b>Error Messages</b> .....                              | <b>108</b> |
| <b>Specifications</b> .....                              | <b>113</b> |
| <b>Battery Life</b> .....                                | <b>132</b> |

## For Your Safety

To prevent damage to your Nikon product or injury to yourself or to others, read the following safety precautions in their entirety before using this equipment. Keep these safety instructions where all those who use the product will read them.

The consequences that could result from failure to observe the precautions listed in this section are indicated by the following symbol:



This icon marks warnings. To prevent possible injury, read all warnings before using this Nikon product.

### ■ ■ WARNINGS

#### **Keep the sun out of the frame**

Keep the sun well out of the frame when shooting backlit subjects. Sunlight focused into the camera when the sun is in or close to the frame could cause a fire.

#### **Do not look at the sun through the viewfinder**

Viewing the sun or other strong light source through the viewfinder could cause permanent visual impairment.

#### **Using the viewfinder diopter adjustment control**

When operating the viewfinder diopter adjustment control with your eye to the viewfinder, care should be taken not to put your finger in your eye accidentally.

#### **Turn off immediately in the event of malfunction**

Should you notice smoke or an unusual smell coming from the equipment or AC adapter (available separately), unplug the AC adapter and remove the battery immediately, taking care to avoid burns. Continued operation could result in injury. After removing the battery, take the equipment to a Nikon-authorized service center for inspection.

#### **Do not use in the presence of flammable gas**

Do not use electronic equipment in the presence of flammable gas, as this could result in explosion or fire.

**⚠ Keep out of reach of children**

Failure to observe this precaution could result in injury. In addition, note that small parts constitute a choking hazard. Should a child swallow any part of this equipment, consult a physician immediately.

**⚠ Do not disassemble**

Touching the product's internal parts could result in injury. In the event of malfunction, the product should be repaired only by a qualified technician. Should the product break open as the result of a fall or other accident, remove the battery and/or AC adapter and then take the product to a Nikon-authorized service center for inspection.

**⚠ Do not place the strap around the neck of an infant or child**

Placing the camera strap around the neck of an infant or child could result in strangulation.

**⚠ Do not remain in contact with the camera, battery, or charger for extended periods while the devices are on or in use**

Parts of the device become hot. Leaving the device in direct contact with the skin for extended periods may result in low-temperature burns.

**⚠ Do not leave the product where it will be exposed to extremely high temperatures, such as in an enclosed automobile or in direct sunlight**

Failure to observe this precaution could cause damage or fire.

**⚠ Do not aim a flash at the operator of a motor vehicle**

Failure to observe this precaution could result in accidents.

**⚠ Observe caution when using the flash**

- Using the camera with the flash in close contact with the skin or other objects could cause burns.
- Using the flash close to the subject's eyes could cause temporary visual impairment. The flash should be no less than one meter (3 ft 4 in.) from the subject. Particular care should be observed when photographing infants.

**⚠ Avoid contact with liquid crystal**

Should the monitor break, care should be taken to avoid injury due to broken glass and to prevent the liquid crystal from the monitor touching the skin or entering the eyes or mouth.

**⚠ Do not carry tripods with a lens or camera attached**

You could trip or accidentally strike others, resulting in injury.

**⚠ Observe proper precautions when handling batteries**

Batteries may leak, overheat, rupture, or catch fire if improperly handled. Observe the following precautions when handling batteries for use in this product:

- Use only batteries approved for use in this equipment.
- Do not short or disassemble the battery.
- Do not expose the battery or the camera in which it is inserted to powerful physical shocks.
- Be sure the product is off before replacing the battery. If you are using an AC adapter, be sure it is unplugged.
- Do not attempt to insert the battery upside down or backwards.
- Do not expose the battery to flame or to excessive heat.
- Do not immerse in or expose to water.
- Replace the terminal cover when transporting the battery. Do not transport or store the battery with metal objects such as necklaces or hairpins.
- Batteries are prone to leakage when fully discharged. To avoid damage to the product, be sure to remove the battery when no charge remains.
- When the battery is not in use, attach the terminal cover and store in a cool, dry place.

- The battery may be hot immediately after use or when the product has been used on battery power for an extended period. Before removing the battery turn the camera off and allow the battery to cool.
- Discontinue use immediately should you notice any changes in the battery, such as discoloration or deformation.

**⚠ Observe proper precautions when handling the charger**

- Keep dry. Failure to observe this precaution could result in injury or product malfunction due to fire or electric shock.
- Do not short the charger terminals. Failure to observe this precaution could result in overheating and damage to the charger.
- Dust on or near the metal parts of the plug should be removed with a dry cloth. Continued use could result in fire.
- Do not go near the charger during thunderstorms. Failure to observe this precaution could result in electric shock.
- Do not handle the plug or charger with wet hands. Failure to observe this precaution could result in injury or product malfunction due to fire or electric shock.
- Do not use with travel converters or adapters designed to convert from one voltage to another or with DC-to-AC inverters. Failure to observe this precaution could damage the product or cause overheating or fire.

**⚠ Use appropriate cables**

When connecting cables to the input and output jacks, use only the cables provided or sold by Nikon for the purpose to maintain compliance with product regulations.

**⚠ Follow the instructions of airline and hospital personnel**

## Notices

- No part of the manuals included with this product may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form, by any means, without Nikon's prior written permission.
- Nikon reserves the right to change the appearance and specifications of the hardware and software described in these manuals at any time and without prior notice.
- Nikon will not be held liable for any damages resulting from the use of this product.
- While every effort has been made to ensure that the information in these manuals is accurate and complete, we would appreciate it were you to bring any errors or omissions to the attention of the Nikon representative in your area (address provided separately).

### **Notice for Customers in Canada**

CAN ICES-3 B / NMB-3 B

### **Notices for Customers in Europe**

**CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.**

This symbol indicates that electrical and electronic equipment is to be collected separately.



This symbol on the battery indicates that the battery is to be collected separately.



The following apply only to users in European countries:

- This product is designated for separate collection at an appropriate collection point. Do not dispose of as household waste.
- Separate collection and recycling helps conserve natural resources and prevent negative consequences for human health and the environment that might result from incorrect disposal.
- For more information, contact the retailer or the local authorities in charge of waste management.

The following apply only to users in European countries:

- All batteries, whether marked with this symbol or not, are designated for separate collection at an appropriate collection point. Do not dispose of as household waste.
- For more information, contact the retailer or the local authorities in charge of waste management.

## Notices for Customers in the U.S.A.

### The Battery Charger

# IMPORTANT SAFETY INSTRUCTIONS—SAVE THESE INSTRUCTIONS

## DANGER—TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS

For connection to a supply not in the U.S.A., use an attachment plug adapter of the proper configuration for the power outlet if needed. This power unit is intended to be correctly oriented in a vertical or floor mount position.

### Federal Communications Commission (FCC) Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.



**Nikon**  
D5500

### CAUTIONS

#### *Modifications*

The FCC requires the user be notified that any changes or modifications made to this device that are not expressly approved by Nikon Corporation may void the user's authority to operate the equipment.

#### *Interface Cables*

Use the interface cables sold or provided by Nikon for your equipment. Using other interface cables may exceed the limits of Class B Part 15 of the FCC rules.

### Notice for Customers in the State of California

**WARNING:** Handling the cord on this product may expose you to lead, a chemical known to the State of California to cause birth defects or other reproductive harm. *Wash hands after handling.*

Nikon Inc., 1300 Walt Whitman Road, Melville, New York 11747-3064, U.S.A.  
Tel.: 631-547-4200



## **Notice Concerning Prohibition of Copying or Reproduction**

Note that simply being in possession of material that has been digitally copied or reproduced by means of a scanner, digital camera, or other device may be punishable by law.

- **Items prohibited by law from being copied or reproduced**

Do not copy or reproduce paper money, coins, securities, government bonds, or local government bonds, even if such copies or reproductions are stamped "Sample."

The copying or reproduction of paper money, coins, or securities which are circulated in a foreign country is prohibited.

Unless the prior permission of the government has been obtained, the copying or reproduction of unused postage stamps or post cards issued by the government is prohibited.

The copying or reproduction of stamps issued by the government and of certified documents stipulated by law is prohibited.

- **Cautions on certain copies and reproductions**

The government has issued cautions on copies or reproductions of securities issued by private companies (shares, bills, checks, gift certificates, etc.), commuter passes, or coupon tickets, except when a minimum of necessary copies are to be provided for business use by a company. Also, do not copy or reproduce passports issued by the government, licenses issued by public agencies and private groups, ID cards, and tickets, such as passes and meal coupons.

- **Comply with copyright notices**

The copying or reproduction of copyrighted creative works such as books, music, paintings, woodcuts, prints, maps, drawings, movies, and photographs is governed by national and international copyright laws. Do not use this product for the purpose of making illegal copies or to infringe copyright laws.

### ***Disposing of Data Storage Devices***

Please note that deleting images or formatting memory cards or other data storage devices does not completely erase the original image data. Deleted files can sometimes be recovered from discarded storage devices using commercially available software, potentially resulting in the malicious use of personal image data. Ensuring the privacy of such data is the user's responsibility.

Before discarding a data storage device or transferring ownership to another person, erase all data using commercial deletion software, or format the device and then completely refill it with images containing no private information (for example, pictures of empty sky). Be sure to also replace any pictures selected for preset manual. Before discarding the camera or transferring ownership to another person, you should also use the **Wi-Fi > Network settings > Reset network settings** (📄 83) option in the camera setup menu to delete any personal network information. Care should be taken to avoid injury when physically destroying data storage devices.

 
### ***AVC Patent Portfolio License***

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE <http://www.mpegla.com>

### **Use Only Nikon Brand Electronic Accessories**

Nikon cameras are designed to the highest standards and include complex electronic circuitry. Only Nikon brand electronic accessories (including chargers, batteries, AC adapters, and flash accessories) certified by Nikon specifically for use with this Nikon digital camera are engineered and proven to operate within the operational and safety requirements of this electronic circuitry.

The use of non-Nikon electronic accessories could damage the camera and may void your Nikon warranty. The use of third-party rechargeable Li-ion batteries not bearing the Nikon holographic seal shown at right could interfere with normal operation of the camera or result in the batteries overheating, igniting, rupturing, or leaking.



For more information about Nikon brand accessories, contact a local authorized Nikon dealer.

#### **✔ Use Only Nikon Brand Accessories**

Only Nikon brand accessories certified by Nikon specifically for use with your Nikon digital camera are engineered and proven to operate within its operational and safety requirements. THE USE OF NON-NIKON ACCESSORIES COULD DAMAGE YOUR CAMERA AND MAY VOID YOUR NIKON WARRANTY.

#### **✔ Before Taking Important Pictures**

Before taking pictures on important occasions (such as at weddings or before taking the camera on a trip), take a test shot to ensure that the camera is functioning normally. Nikon will not be held liable for damages or lost profits that may result from product malfunction.

#### **✔ Life-Long Learning**

As part of Nikon's "Life-Long Learning" commitment to ongoing product support and education, continually-updated information is available online at the following sites:

- **For users in the U.S.A.:** <http://www.nikonusa.com/>
- **For users in Europe and Africa:** <http://www.europe-nikon.com/support/>
- **For users in Asia, Oceania, and the Middle East:** <http://www.nikon-asia.com/>

Visit these sites to keep up-to-date with the latest product information, tips, answers to frequently-asked questions (FAQs), and general advice on digital imaging and photography. Additional information may be available from the Nikon representative in your area. See the following URL for contact information: <http://imaging.nikon.com/>

## Wireless

This product, which contains encryption software developed in the United States, is controlled by the United States Export Administration Regulations and may not be exported or re-exported to any country to which the United States embargoes goods. The following countries are currently subject to embargo: Cuba, Iran, North Korea, Sudan, and Syria.

The use of wireless devices may be prohibited in some countries or regions. Contact a Nikon-authorized service representative before using the wireless features of this product outside the country of purchase.

### **Notices for Customers in the U. S. A.**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### **FCC WARNING**

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Nikon Corporation may void the user's authority to operate the equipment.

### **FCC Radio Frequency Interference Statement**

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **Co-location**

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

Nikon Inc., 1300 Walt Whitman Road, Melville, New York 11747-3064, U.S.A.  
Tel.: 631-547-4200

### ***Notices for Customers in Canada***

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

### **FCC/IC RF Exposure Statement**

The available scientific evidence does not show that any health problems are associated with using low power wireless devices. There is no proof, however, that these low power wireless devices are absolutely safe. Low power Wireless devices emit low levels of radio frequency energy (RF) in the microwave range while being used. Whereas high levels of RF can produce health effects (by heating tissue), exposure of low-level RF that does not produce heating effects causes no known adverse health effects. Many studies of low-level RF exposures have not found any biological effects. Some studies have suggested that some biological effects might occur, but such findings have not been confirmed by additional research. The D5500, which is equipped with a LBWA1U5YR1 (FCC ID: VPYLBYSR650/IC ID: 772C-LBYSR650) wireless LAN module, has been tested and found to comply with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65 and RSS-102 of the IC radio frequency (RF) Exposure rules. Please refer to the SAR test report that was uploaded to FCC website.

### **Notices for Customers in Europe**

Hereby, Nikon Corporation, declares that the D5500 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The declaration of conformity may be consulted at [http://imaging.nikon.com/support/pdf/DoC\\_D5500.pdf](http://imaging.nikon.com/support/pdf/DoC_D5500.pdf)



### **Notice for Customers in Singapore**

|  |
|--|
| Trade Name: <b>Nikon</b><br>Model: D5500 |
|--|

This device complies with radio-frequency regulations. The content of certification labels not affixed to the device is given below.

|  |
|--|
| Complies with<br>IDA Standards<br>DA103423 |
|--|

### **Security**

Although one of the benefits of this product is that it allows others to freely connect for the wireless exchange of data anywhere within its range, the following may occur if security is not enabled:


- Data theft: Malicious third-parties may intercept wireless transmissions to steal user IDs, passwords, and other personal information.
- Unauthorized access: Unauthorized users may gain access to the network and alter data or perform other malicious actions. Note that due to the design of wireless networks, specialized attacks may allow unauthorized access even when security is enabled.

# Introduction


## Getting to Know the Camera

Take a few moments to familiarize yourself with camera controls and displays. You may find it helpful to bookmark this section and refer to it as you read through the rest of the manual.

### The Camera Body

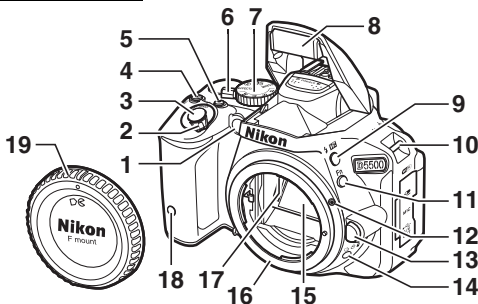

|    |  |        |
|----|--|--------|
| 1  | AF-assist illuminator<br>Self-timer lamp<br>Red-eye reduction lamp |        |
| 2  | Power switch   | 28     |
| 3  | Shutter-release button   | 38     |
| 4  | ☒/⊗ button   | 70, 72 |
| 5  | Movie-record button  | 49     |
| 6  | Live view switch   | 43, 48 |
| 7  | Mode dial  | 4      |
| 8  | Built-in flash   | 42     |
| 9  | ⚡/☒ button   | 58, 68 |
| 10 | Eyelets for camera strap   | 24     |
| 11 | Fn button  | 86     |
| 12 | Mounting mark  | 26     |
| 13 | Lens release button  | 34     |
| 14 | ☑/☺/☒ button   | 5      |
| 15 | Mirror   |        |
| 16 | Lens mount   | 26     |
| 17 | CPU contacts   |        |
| 18 | Infrared receiver for ML-L3 remote control (front)                 | 99     |
| 19 | Body cap   |        |

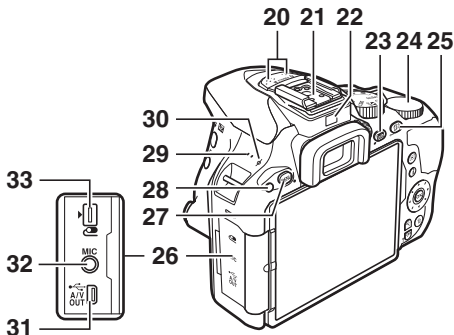

|   |   |
|---|---|
| <b>20</b> Stereo microphone                         | <b>28</b> Infrared receiver for ML-L3 remote control (rear)..... 99 |
| <b>21</b> Accessory shoe (for optional flash units) | <b>29</b> Speaker   |
| <b>22</b> Eye sensor..... 10                        | <b>30</b> Focal plane mark (⊕)                                      |
| <b>23</b> info (information) button..... 9, 74      | <b>31</b> USB and A/V connector ..... 93                            |
| <b>24</b> Command dial                              | <b>32</b> Connector for external microphone ..... 100               |
| <b>25</b> AE-L/AF-L button ..... 86                 | <b>33</b> Accessory terminal..... 100                               |
| <b>26</b> Connector cover                           |   |
| <b>27</b> MENU button..... 74, 84                   |   |


#### **✔ Close the Connector Cover**

Close the connector cover when the connectors are not in use. Foreign matter in the connectors can interfere with data transfer.

#### **✔ The Speaker**

Do not place the speaker in close proximity to magnetic devices. Failure to observe this precaution could affect the data recorded on the magnetic devices.




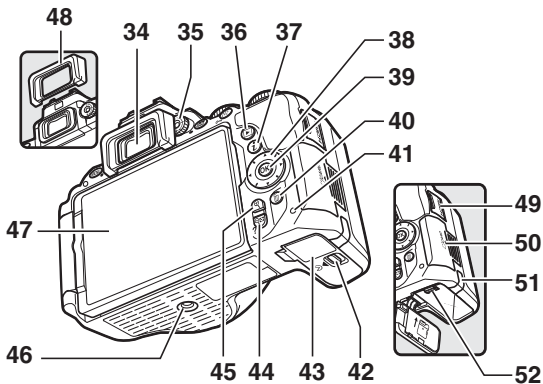

|   |  |
|---|--|
| <b>34</b> Viewfinder eyepiece.....6, 30       | <b>44</b> button.....39, 40                  |
| <b>35</b> Diopter adjustment control ..... 30 | <b>45</b> button.....39, 40                  |
| <b>36</b> button..... 39                      | <b>46</b> Tripod socket                      |
| <b>37</b> button..... 11                      | <b>47</b> Vari-angle monitor                 |
| <b>38</b> Multi selector .....13, 89          | .....7, 14, 39, 43                           |
| <b>39</b> (OK) button.....13, 89              | <b>48</b> Rubber eyecup                      |
| <b>40</b> button ..... 41                     | <b>49</b> HDMI connector cover               |
| <b>41</b> Memory card access lamp ..... 38    | <b>50</b> Memory card slot cover .....25, 32 |
| <b>42</b> Battery-chamber cover               | <b>51</b> Power connector cover for          |
| latch .....25, 32                             | optional power connector                     |
| <b>43</b> Battery-chamber cover .....25, 32   | <b>52</b> Battery latch.....25, 32           |


## The Mode Dial

The camera offers a choice of the following shooting modes.

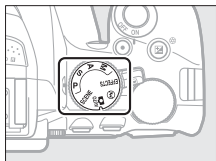

### P, S, A, and M Modes:

- **P**— Programmed auto (□ 68)
- **S**— Shutter-priority auto (□ 69)
- **A**— Aperture-priority auto (□ 69)
- **M**— Manual (□ 70)

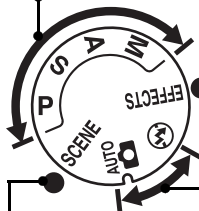


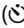
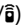

### Special Effects Modes (□ 59)

### Auto Modes:







-  Auto (□ 35)
-  Auto (flash off) (□ 35)


### Scene Modes (□ 55)


## The (/) Button


To choose how the shutter is released (release mode), press the  (/) button, then use the multi selector to highlight the desired option and press .

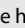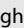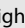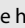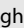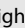


 

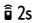

### Choosing a Release Mode with the Command Dial

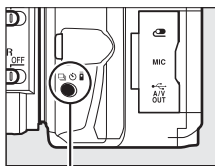The release mode can also be selected by keeping the  (/) button pressed while rotating the command dial. Release the  (/) button to select the highlighted option and return to the information display.

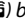


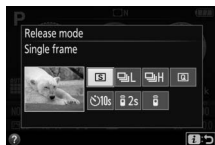
 (/) button



| Mode  | Description   |
|---|---|
|    | <b>Single frame:</b> Camera takes one photograph each time shutter-release button is pressed.   |
|    | <b>Continuous L:</b> The camera takes photographs at a slow rate while the shutter-release button is pressed.   |
|    | <b>Continuous H:</b> The camera takes photographs at a fast rate while the shutter-release button is pressed.   |
|    | <b>Quiet shutter release:</b> As for single-frame, except that camera noise is reduced.   |
|    | <b>Self-timer:</b> Take pictures with the self-timer. The timer starts when the shutter-release button is pressed all the way down, and the shutter is released after about 10 seconds. |
|  | <b>Delayed remote (ML-L3):</b> Shutter is released 2 s after shutter-release button on optional ML-L3 remote control is pressed.  |
|  | <b>Quick-response remote (ML-L3):</b> Shutter is released when shutter-release button on optional ML-L3 remote control is pressed.  |

## The Viewfinder


**Note:** Display shown with all indicators lit for illustrative purposes.

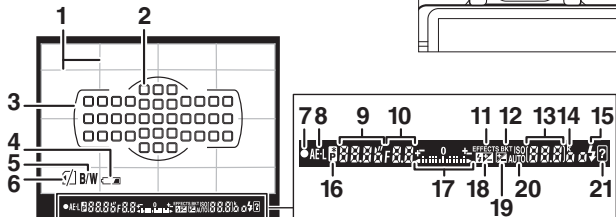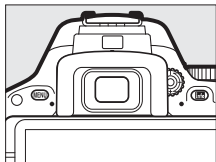


- |  |   |
|--|---|
| <p><b>1</b> Framing grid (displayed when <b>On</b> is selected for Custom Setting d3, <b>Viewfinder grid display</b>)</p> <p><b>2</b> Focus points.....37</p> <p><b>3</b> AF area brackets.....30, 37</p> <p><b>4</b> Low battery warning .....31</p> <p><b>5</b> Monochrome indicator (displayed in  mode or when the <b>Monochrome</b> Picture Control or a Picture Control based on <b>Monochrome</b> is selected) ..... 12, 59</p> <p><b>6</b> "No memory card" indicator .....25</p> <p><b>7</b> Focus indicator.....37</p> <p><b>8</b> Autoexposure (AE) lock indicator</p> <p><b>9</b> Shutter speed .....71</p> <p><b>10</b> Aperture (f-number) .....71</p> <p><b>11</b> Special effects mode indicator...59</p> <p><b>12</b> Bracketing indicator.....11</p> | <p><b>13</b> Number of exposures remaining.....31</p> <p>Number of shots remaining before memory buffer fills .....37</p> <p>White balance recording indicator</p> <p>Exposure compensation value...72</p> <p>Flash compensation value .....12</p> <p>ISO sensitivity.....12</p> <p>Capture mode indicator</p> <p><b>14</b> "k" (appears when memory remains for over 1000 exposures) .....31</p> <p><b>15</b> Flash-ready indicator.....42</p> <p><b>16</b> Flexible program indicator</p> <p><b>17</b> Exposure indicator .....70</p> <p>Exposure compensation display.....72</p> <p>Electronic rangefinder .....86</p> <p><b>18</b> Flash compensation indicator....12</p> <p><b>19</b> Exposure compensation indicator .....72</p> <p><b>20</b> Auto ISO sensitivity indicator</p> <p><b>21</b> Warning indicator ..... 108</p> |
|--|---|

## The Monitor


The monitor can be angled and rotated as shown below.

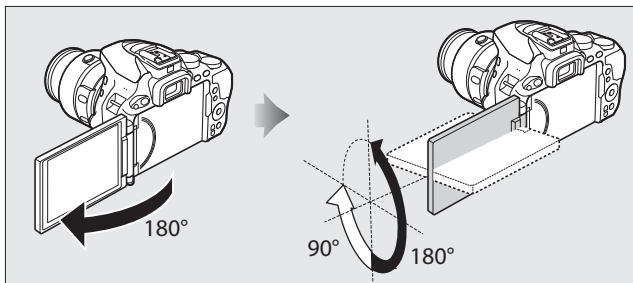


**Normal use:** Fold the monitor against the camera face out. The monitor is normally used in this position.

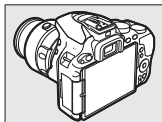



**Low-angle shots:** Tilt the monitor up to take shots in live view with the camera held low.

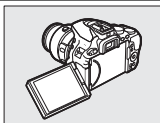

**High-angle shots:** Tilt the monitor down to take shots in live view with the camera held high.

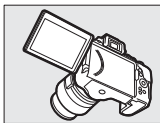

**Self-portraits:** Use for self-portraits in live view. The monitor shows a mirror image of what will appear in the final picture.

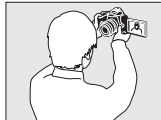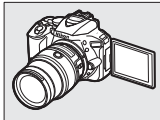


**✔ Using the Monitor**

Rotate the monitor gently within the limits shown. *Do not use force.* Failure to observe these precautions could damage the camera or monitor. To protect the monitor when the camera is not in use, fold it back face down against the camera body.

Do not lift or carry the camera by the monitor. Failure to observe this precaution could damage the camera.

# The Information Display


**Viewing settings:** To view the information display, press the **info** button.

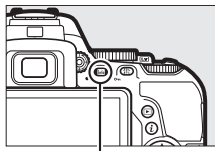

**info** button



|   |  |
|---|--|
| <p><b>1</b> Shooting mode<br/> <small>AUTO</small> auto/<br/>           Ⓢ auto (flash off) ..... 35<br/>           Scene modes..... 55<br/>           Special effects mode..... 59<br/> <b>P, S, A, and M</b> modes..... 68</p> | <p><b>6</b> Touch Fn assignment..... 17</p>  |
| <p><b>2</b> Aperture (f-number) ..... 71<br/>           Aperture display ..... 71</p>   | <p><b>7</b> Vignette control indicator ..... 85</p>  |
| <p><b>3</b> Shutter speed ..... 71<br/>           Shutter-speed display..... 71</p>   | <p><b>8</b> Exposure delay mode ..... 86</p>   |
| <p><b>4</b> Satellite signal indicator</p>  | <p><b>9</b> Date stamp indicator ..... 86</p>  |
| <p><b>5</b> Wi-Fi connection indicator ..... 83<br/>           Eye-Fi connection indicator</p>  | <p><b>10</b> Vibration reduction indicator .... 34</p>   |
|   | <p><b>11</b> Flash control indicator<br/>           Flash compensation indicator for<br/>           optional flash units</p>   |
|   | <p><b>12</b> Battery indicator ..... 31</p>  |
|   | <p><b>13</b> ISO sensitivity ..... 12<br/>           ISO sensitivity display<br/>           Auto ISO sensitivity indicator</p> |

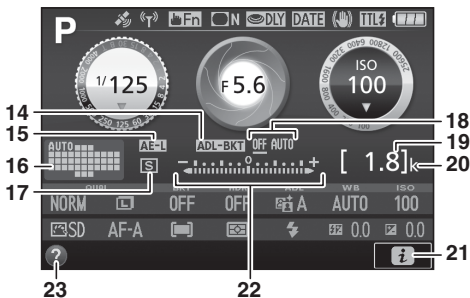

|    |                                    |    |    |   |     |
|----|------------------------------------|----|----|---|-----|
| 14 | Bracketing indicator.....          | 11 | 20 | "k" (appears when memory remains for over 1000 exposures) ..... | 31  |
| 15 | Autoexposure (AE) lock indicator   |    | 21 | Info icon.....  | 17  |
| 16 | AF-area mode indicator .....       | 12 | 22 | Exposure indicator .....  | 70  |
| 17 | Focus point.....                   | 37 |    | Exposure compensation indicator .....                           | 72  |
| 18 | ADL bracketing amount              |    |    | Bracketing progress indicator                                   |     |
| 19 | Number of exposures remaining..... | 31 | 23 | Help icon .....   | 108 |
|    | White balance recording indicator  |    |    |   |     |
|    | Capture mode indicator             |    |    |   |     |


**Note:** Display shown with all indicators lit for illustrative purposes.

### Info Display Auto Off


The eye sensor will automatically turn the info display off if you put your eye to the viewfinder while the standby timer is active. The display will turn on again when you remove your eye from the viewfinder. If desired, you can prevent the information display turning off using the **Info display auto off** option (□ 87) in the setup menu. Note, however, that regardless of the option selected the information display will turn off when the standby timer expires.



**Changing settings:** To change the settings at the bottom of the display, press the **i** button, then highlight items using the multi selector and press **OK** to view options for the highlighted item. You can also change settings by pressing the **i** button during live view.

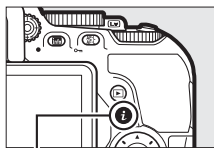

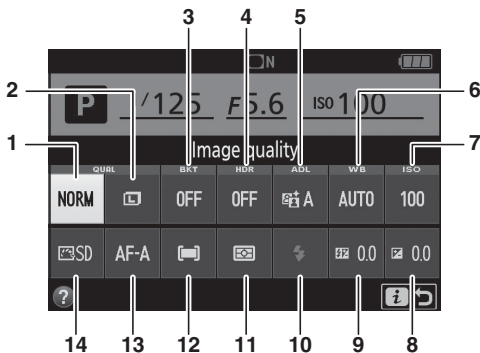

*i* button







|   |                          |  |
|---|--------------------------|--|
| 1 | Image quality            | Choose a file format and compression ratio.  |
| 2 | Image size               | Choose a size for new photos.  |
| 3 | Auto bracketing          | Choose the bracketing increment (exposure and white balance bracketing) or turn ADL bracketing on or off.      |
| 4 | HDR (high dynamic range) | The camera combines two photographs taken at different exposures to enhance details in highlights and shadows. |
| 5 | Active D-Lighting        | Improves the level of detail in highlights and shadows under high-contrast conditions.                         |
| 6 | White balance            | Adjust settings for different types of lighting.   |



|    |                       |   |
|----|-----------------------|---|
| 7  | ISO sensitivity       | Control the camera's sensitivity to light.  |
| 8  | Exposure compensation | Adjust exposure from the value metered by the camera, making the entire frame brighter or darker.   |
| 9  | Flash compensation    | Adjust flash level.   |
| 10 | Flash mode            | Choose the flash mode.  |
| 11 | Metering              | Choose how the camera meters exposure.  |
| 12 | AF-area mode          | Choose how the focus area is selected.  |
| 13 | Focus mode            | Choose how the camera focuses.  |
| 14 | Picture Control       | Picture Controls determine how new photos are processed. Choose a Picture Control according to the type of scene or your creative intent. |

### Turning the Monitor Off

To clear shooting information from the monitor, press the  button or press the shutter-release button halfway. The monitor will turn off automatically if no operations are performed for about 8 seconds (Custom Setting c2, **Auto off timers**, can be used to choose how long the monitor remains on;  86). The monitor will also turn off if you cover the eye sensor or look through the viewfinder.

## The Multi Selector

In this manual, operations using the multi selector are represented by , , , and  icons.

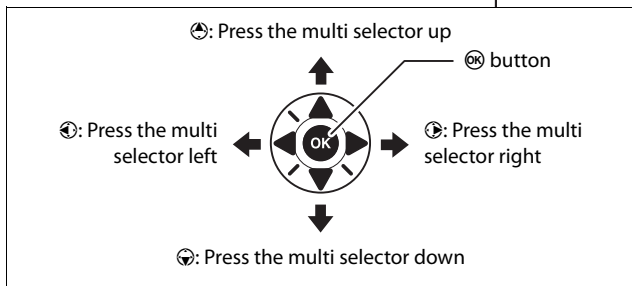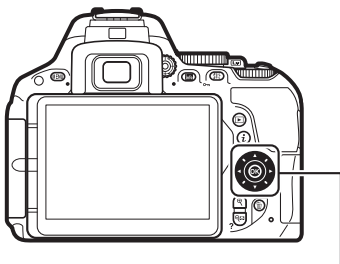

## Using the Touch Screen


The touch-sensitive monitor supports the following operations:



---

### Flick


Flick a finger a short distance across the monitor.

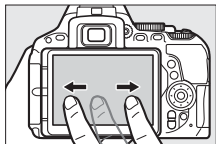

---

### Slide



Slide a finger over the monitor.

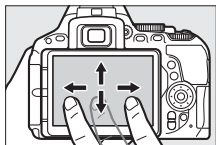

---

### Stretch/Pinch

Place two fingers on the monitor and move them apart or pinch them together.

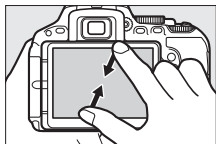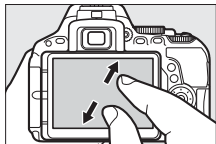

### ✔ The Touch Screen

The touch screen responds to static electricity and may not respond when covered with third-party protective films or when touched with fingernails or gloved hands. Do not use excessive force or touch the screen with sharp objects.

### ✔ Using the Touch Screen

The touch screen may not respond as expected if you attempt to operate it while leaving your palm or another finger resting on it in second location. It may not recognize other gestures if your touch is too soft, your fingers are moved too quickly or too short a distance or do not remain in contact with the screen, or if the movement of the two fingers in a pinch or stretch is not correctly coordinated.

### ✔ Enabling or Disabling Touch Controls

Touch controls can be enabled or disabled using the **Touch controls** option in the setup menu (☐ 87). Select **Enable** to enable touch controls for shooting, playback, and menu navigation or **Playback only** to enable touch controls for playback only.

## Touch-Screen Photography

Tap icons in the shooting display to adjust camera settings (note that not all icons will respond to touch-screen operations).

During live view, you can also take photographs by tapping the monitor.

### ■ Viewfinder Photography

Use the touch screen to adjust settings in the information display ( 9).


### Scene/Effect Selection

In scene and special effects modes ( 55, 59), you can tap the shooting mode icon to choose a scene or effect. Tap ◀ or ▶ to view the different options and tap an icon to select and return to the previous display.



### Shutter Speed and Aperture

In modes **S**, **A**, and **M**, you can tap the ◀ ▶ icon next to the shutter speed or aperture displays to view ◀ and ▶ controls, which you can tap to choose a new value. Tap ↶ to exit when the operation is complete.

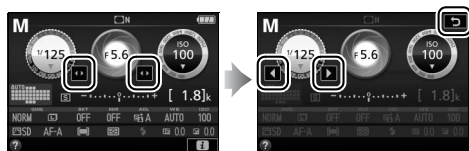

## Shooting Options

To change camera settings ( 11), tap the **i** icon at the bottom right corner of the display and then tap icons to display options for the corresponding setting. Tap the desired option to select it and return to the previous display.




If prompted to choose a value as shown at right, edit the value by tapping ▲ or ▼ and then tap the number or tap **OK** to select it and return to the previous display.



To exit without changing settings, tap **i**:>.

## Touch Fn

A touch-sensitive area of the monitor can be used to control the camera after the monitor has turned off automatically. The position of this “touch Fn” area varies with the position of the monitor; the role it plays can be chosen using Custom Settings f3 (**Assign touch Fn**, 86). Slide your finger left or right across the area indicated in the illustration to adjust the chosen option (note that touch Fn is not available when the monitor is facing forward).

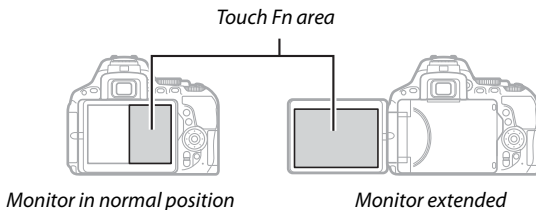

## ■ Live View Photography

The touch screen can be used to adjust settings and take photographs.



### Taking Photographs (Touch Shutter)


Touch the monitor to focus and lift your finger to take the photograph.



Tap the icon shown at right to choose the operation performed by tapping the monitor in shooting mode. Choose from the following options:





| Option   | Description  |
|--|--|
|  <b>(touch shutter on)</b>  | Touch the monitor to position the focus point and focus (autofocus only; the touch shutter can not be used to focus when MF—manual focus—is selected for focus mode). The shutter is released when you lift your finger from the screen. |
|  <b>(touch shutter off)</b> | As above, except that lifting your finger from the screen does not release the shutter.  |


Focus locks while your finger is on the monitor. During movie recording, the touch shutter remains off () and you can refocus at any time by touching your subject in the monitor; the touch shutter options icon is not displayed.





### ✔ Taking Pictures Using Tap Shooting Options

Avoid moving the camera when releasing the shutter. Camera movement can result in blurred photographs.


The shutter-release button can be used to focus and take pictures even when the  icon is displayed to show that touch shooting options are active. Use the shutter-release button to take photographs in continuous shooting mode ( 5) and during movie recording. Touch shooting options can be used only to take pictures one at a time in continuous shooting mode and can not be used to take photographs during movie recording.

While subject tracking is active and  (touch shutter off) is selected, you can focus on the current subject by tapping the monitor.

In self-timer mode ( 5), focus locks on the selected subject when you touch the monitor and the timer starts when you lift your finger from the screen. At default settings, the shutter is released about 10 s after the timer starts; the delay and number of shots can be changed using Custom Setting c3 (**Self-timer**,  86). If the option selected for **Number of shots** is greater than 1, the camera will automatically take pictures one after the other until the selected number of shots is recorded.


## Scene/Effect Selection

In scene and special effects modes (📖 55, 59), you can tap the shooting mode icon to choose a scene or effect. Tap ◀ or ▶ to view the different options and tap an icon to select and return to the previous display.

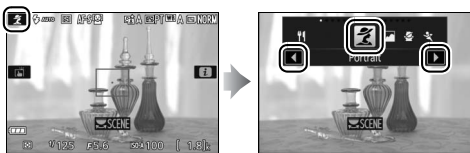

## Shutter Speed and Aperture

In modes **S**, **A**, and **M**, tapping the shutter speed or aperture displays ◀ and ▶ controls, which you can tap to choose a new value. Tap ↶ to exit when the operation is complete.

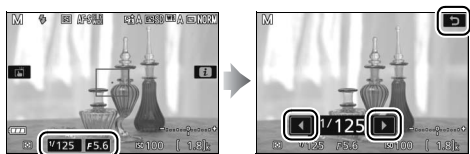


## Shooting Options

In live view, pressing the **i** button or tapping the **i** icon in the monitor activates the information display. Tap a setting to view options and then tap the desired option to select it and return to live view.







If prompted to choose a value as shown at right, edit the value by tapping **▲** or **▼** and then tap the number or tap **OK** to select it and return to the previous display.

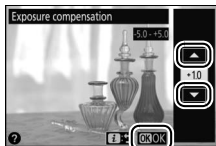

To exit without changing settings, tap **i** or **↶**.




## Viewing Pictures

The touch screen can be used for the following playback operations (☞ 39, 52).
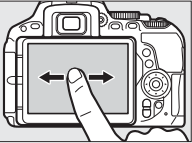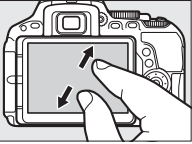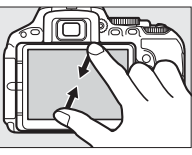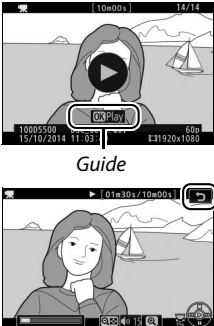
|                              |  |  |
|------------------------------|--|--|
| <b>View other images</b>     |   | Flick left or right to view other images.  |
| <b>Zoom in (photos only)</b> |   | Use stretch and pinch gestures to zoom in and out and slide to scroll.   |
| <b>View thumbnails</b>       |   | To “zoom out” to a thumbnail view (☞ 39), use a pinch gesture in full-frame playback. Use pinch and stretch to choose the number of images displayed from 4, 12, or 80 frames.   |
| <b>View movies</b>           |  | Tap the on-screen guide to start movie playback (movies are indicated by a 🎬 icon). Tap the display to pause or resume, or tap 🏠 to exit to full-frame playback (note that some of the icons in the movie playback display do not respond to touch-screen operations). |

## Using the Menus

The touch screen can be used for the following menu operations ( 84).

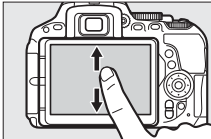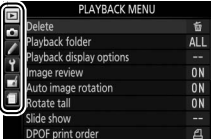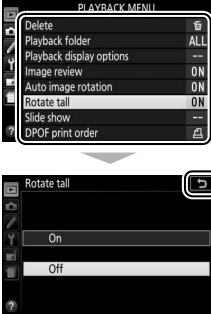
|  |   |   |
|--|---|---|
| <b>Scroll</b>                              |  | Slide up or down to scroll.   |
| <b>Choose a menu</b>                       |  | Tap a menu icon to choose a menu.   |
| <b>Select options/<br/>adjust settings</b> |  | Tap menu items to display options and tap icons or sliders to change. To exit without changing settings, tap ↩. |

## First Steps

Follow the eight steps below to ready the camera for use.


### 1 Attach the strap.

Attach the strap as shown. Repeat for the second eyelet.

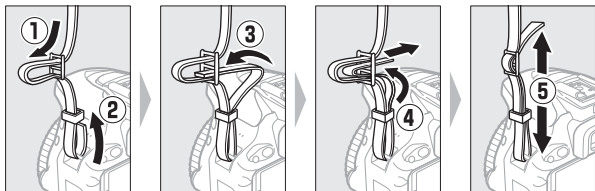

### 2 Charge the battery.

If a plug adapter is supplied, raise the wall plug and connect the plug adapter as shown below at left, making sure the plug is fully inserted. Insert the battery and plug the charger in. An exhausted battery will fully charge in about an hour and 50 minutes.

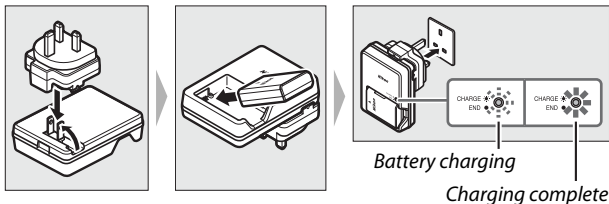


### The Battery and Charger

Read and follow the warnings and cautions on pages ix–xii and 103–107 of this manual.


### 3 Insert the battery and memory card.

Before inserting or removing the battery or memory cards, confirm that power switch is in the **OFF** position. Insert the battery in the orientation shown, using the battery to keep the orange battery latch pressed to one side. The latch locks the battery in place when the battery is fully inserted.

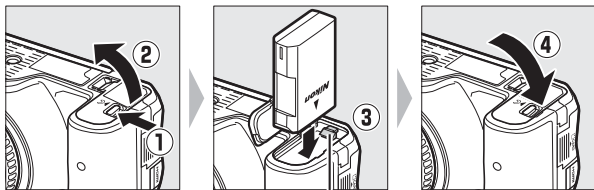


*Battery latch*

Slide the memory card in until it clicks into place.

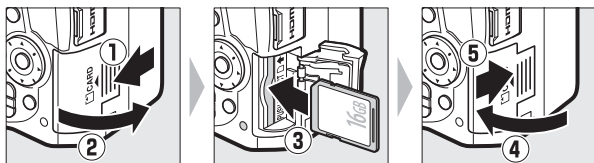

## 4 Attach a lens.

Be careful to prevent dust from entering the camera when the lens or body cap is removed.

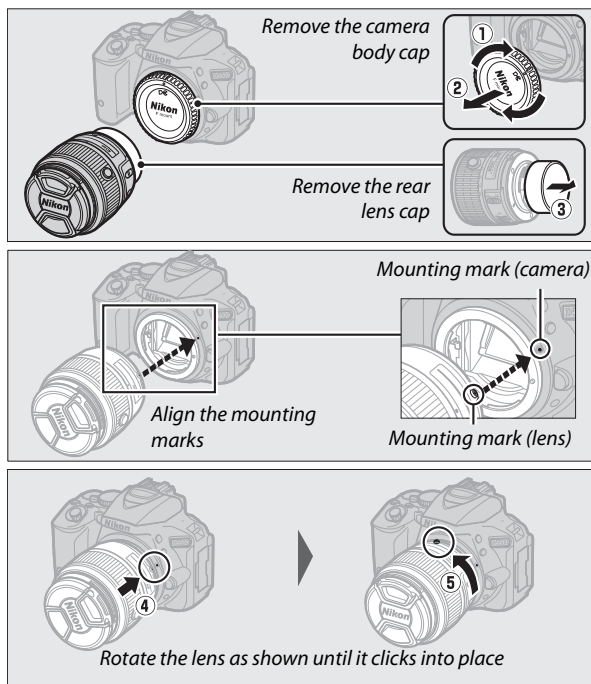


Be sure to remove the lens cap before taking pictures.



### Lenses with Retractable Lens Barrel Buttons

Before using the camera, unlock and extend the lens. Keeping the retractable lens barrel button pressed (①), rotate the zoom ring as shown (②).

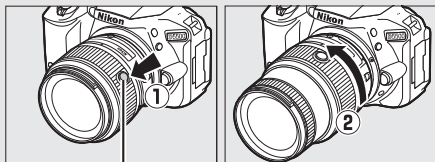


*Retractable lens barrel button*

Pictures can not be taken when the lens is retracted; if an error message is displayed as a result of the camera having been turned on with the lens retracted, rotate the zoom ring until the message is no longer displayed.




## 5 Open the monitor.

Open the monitor as shown. *Do not use force.*

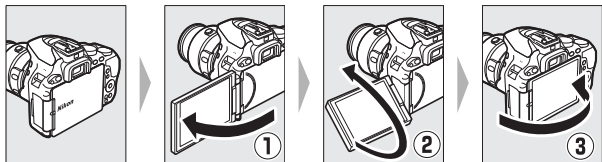

## 6 Turn the camera on.

A language-selection dialog will be displayed.

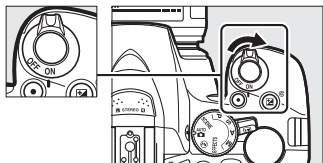

### The Power Switch

Rotate the power switch as shown to turn the camera on.




Rotate the power switch as shown to turn the camera off.




## 7 Choose a language and set the camera clock.


Use the multi selector and **OK** button to select a language and set the camera clock.

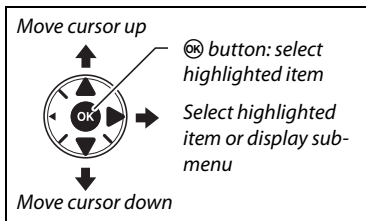


Select language

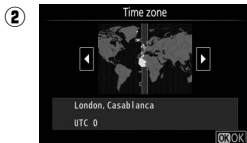


Select time zone

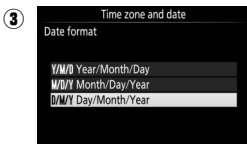

Select date format


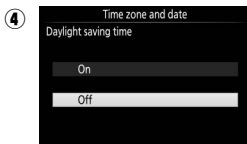


Select daylight saving time option

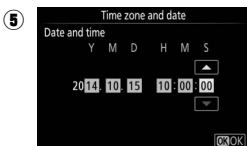


Set time and date (note that the camera uses a 24-hour clock)

- 8 Focus the viewfinder.**  
After removing the lens cap, rotate the diopter adjustment control until the AF area brackets are in sharp focus. When operating the control with your eye to the viewfinder, be careful not to put your fingers or fingernails in your eye.

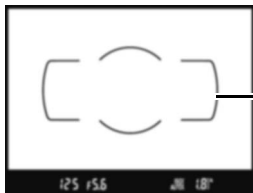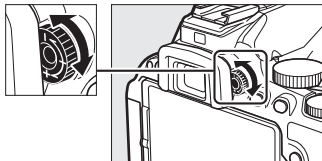

*Viewfinder not in focus*

*AF area  
brackets*

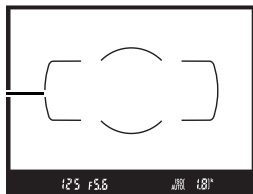

*Viewfinder in focus*


The camera is now ready for use. Proceed to page 35 for information on taking photographs.

### **The Clock Battery**

The camera clock is powered by an independent, rechargeable power source, which is charged as necessary when the main battery is installed. Three days of charging will power the clock for about a month. If a message warning that the clock is not set is displayed when the camera is turned on, the clock battery is exhausted and the clock has been reset. Set the clock to the correct time and date.

## ■ The Battery Level and Number of Exposures Remaining

Press the **info** button and check the battery level and number of exposures remaining in the information display.

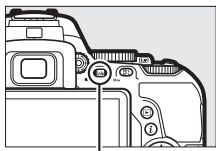

**info** button



*Number of exposures remaining*

### Battery Level

If the battery is low, a warning will also be displayed in the viewfinder. If the information display does not appear when the **info** button is pressed, the battery is exhausted and needs to be recharged.

| Information display | Viewfinder    | Description  |
|---------------------|---------------|--|
|                     | —             | Battery fully charged.   |
|                     | —             | Battery partially discharged.  |
|                     |               | Low battery. Ready fully-charged spare battery or prepare to charge battery. |
| <br>(flashes)       | <br>(flashes) | Battery exhausted. Charge battery.   |


### Number of Exposures Remaining

Values over 1000 are shown in thousands, indicated by the letter "k".

## ■ Removing the Battery and Memory Cards


### Removing the Battery

Turn the camera off and open the battery-chamber cover. Press the battery latch in the direction shown by the arrow to release the battery and then remove the battery by hand.

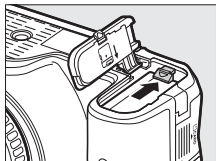


### Removing Memory Cards

After confirming that the memory card access lamp is off, turn the camera off, open the memory card slot cover, and press the card in to eject it (1). The card can then be removed by hand (2).

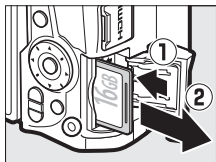

### ■ The Write Protect Switch

 SD memory cards are equipped with a write protect switch to prevent accidental loss of data. When this switch is in the "lock" position, the memory card can not be formatted and photos can not be deleted or recorded (a beep will sound if you attempt to release the shutter). To unlock the memory card, slide the switch to the "write" position.




Write-protect switch

### **✔ Memory Cards**

- Memory cards may be hot after use. Observe due caution when removing memory cards from the camera.
- Turn the power off before inserting or removing memory cards. Do not remove memory cards from the camera, turn the camera off, or remove or disconnect the power source during formatting or while data are being recorded, deleted, or copied to a computer. Failure to observe these precautions could result in loss of data or in damage to the camera or card.
- Do not touch the card terminals with your fingers or metal objects.
- Do not bend, drop, or subject to strong physical shocks.
- Do not apply force to the card casing. Failure to observe this precaution could damage the card.
- Do not expose to water, heat, high levels of humidity, or direct sunlight.
- Do not format memory cards in a computer.

## ■ Detaching the Lens

Be sure the camera is off when removing or exchanging lenses. To remove the lens, press and hold the lens release button (1) while turning the lens clockwise (2). After removing the lens, replace the lens caps and camera body cap.

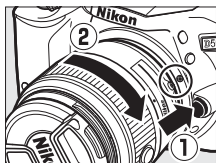

## ■ A-M, M/A-M, and A/M-M Switches

When using autofocus with a lens equipped with an **A-M** mode switch, slide the switch to **A** (if the lens has an **M/A-M** or **A/M-M** switch, select **M/A** or **A/M**). For information on other lenses that can be used with this camera, see page 95.




## ■ Vibration Reduction (VR)

Vibration reduction can be enabled by selecting **On** for **Optical VR** in the shooting menu, if the lens supports this option, or by sliding the lens vibration reduction switch to **ON**, if the lens is equipped with a vibration reduction switch. A vibration reduction indicator appears in the information display when vibration reduction is on.





## ■ Retracting Lenses with Retractable Lens Barrel Buttons

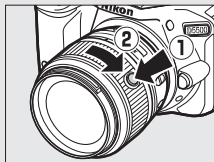To retract the lens when the camera is not in use, press and hold the retractable lens barrel button (1) and rotate the zoom ring to the "L" (lock) position as shown (2). Retract the lens before removing it from the camera, and be careful not to press the retractable lens barrel button when attaching or removing the lens.








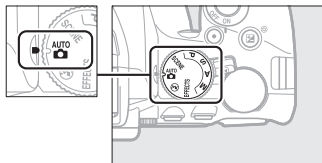
# “Point-and-Shoot” Modes (AUTO and )

This section describes how to shoot photographs and movies in  and  modes, automatic “point-and-shoot” modes in which the majority of settings are controlled by the camera in response to shooting conditions.



Before proceeding, turn the camera on and rotate the mode dial to  or  (the only difference between the two is that the flash will not fire in  mode).

Mode dial



## Viewfinder photography




Taking photographs  36

Viewing photographs  39

Deleting photographs  41

## Live view

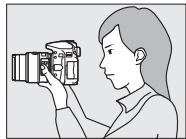

Taking photographs  43

Viewing photographs  46

Deleting photographs  47



Shooting movies  48

Viewing movies  52

Deleting movies  54

# Framing Photos in the Viewfinder

## 1 Ready the camera.

When framing photographs in the viewfinder, hold the handgrip in your right hand and cradle the camera body or lens with your left.



When framing photographs in portrait (tall) orientation, hold the camera as shown at right.




## Using a Zoom Lens

Before focusing, rotate the zoom ring to adjust the focal length and frame the photograph. Use the zoom ring to zoom in on the subject so that it fills a larger area of the frame, or zoom out to increase the area visible in the final photograph (select longer focal lengths on the lens focal length scale to zoom in, shorter focal lengths to zoom out).

If the lens is equipped with a retractable lens barrel button (□ 27), press and hold the button while rotating the zoom ring until the lens is released and the message shown at right is no longer displayed, and then adjust zoom using the zoom ring.

*Zoom in*

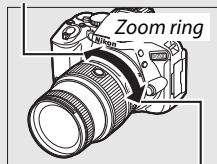


*Zoom out*



## 2 Frame the photograph.


Frame a photograph in the viewfinder with the main subject in the AF area brackets.

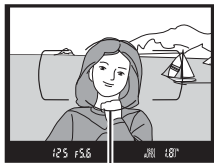

*AF area brackets*

## 3 Press the shutter-release button halfway.

Press the shutter-release button halfway to focus (if the subject is poorly lit, the flash may pop up and the AF-assist illuminator may light). When the focus operation is complete, a beep will sound (a beep may not sound if the subject is moving) and the active focus point and in-focus indicator (●) will appear in the viewfinder.

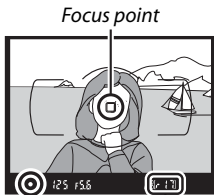


*In-focus indicator*

*Buffer capacity*

| In-focus indicator | Description                                   |
|--------------------|---|
| ●                  | Subject in focus.                             |
| ● (flashes)        | Camera unable to focus using autofocus (109). |

## 4 Shoot.

Smoothly press the shutter-release button the rest of the way down to take the photograph. The memory card access lamp will light and the photograph will be displayed in the monitor for a few seconds. *Do not eject the memory card or remove or disconnect the power source until the lamp has gone out and recording is complete.*



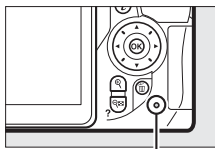


Memory card access lamp



### The Shutter-Release Button

The camera has a two-stage shutter-release button. The camera focuses when the shutter-release button is pressed halfway. To take the photograph, press the shutter-release button the rest of the way down.

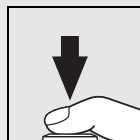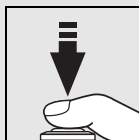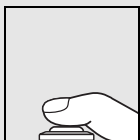


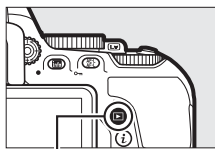
Focus: press halfway

Shoot: press all the way down

Pressing the shutter-release button halfway also ends playback and readies the camera for immediate use.



## Viewing Photographs

Pressing  displays a picture in the monitor.






 button





Press  or  to view additional pictures.



### Thumbnail Playback

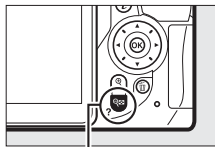


To display images in “contact sheets” of four, 12, or 80 images (thumbnail playback), press the  (?) button. Use the multi selector or command dial to highlight images and press  to display the highlighted image full frame. Press  to reduce the number of images displayed.



 (?) button



## Calendar Playback

To view images taken on a selected date (calendar playback), press the  (?) button when 80 images are displayed. Press the  (?) button to toggle between the date list and the list of thumbnails for the selected date. Use the multi selector to highlight dates in the date list or to highlight pictures in the thumbnail list. Press  when the cursor is in the date list to return to 80-frame playback.


*Date list*




*Thumbnail list*


## Deleting Unwanted Pictures

Display the photograph you wish to delete. *Note that photographs can not be recovered once deleted.*

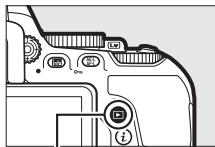


▶ button


Press ; a confirmation dialog will be displayed.

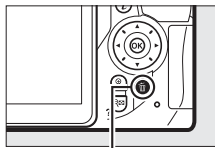


 button




Press the  button again to delete the picture.

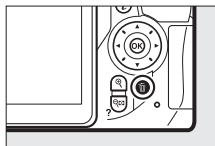


### **The Standby Timer (Viewfinder Photography)**

The viewfinder and information display will turn off if no operations are performed for about eight seconds, reducing the drain on the battery. Press the shutter-release button halfway to reactivate the display. The length of time before the standby timer expires automatically can be selected using Custom Setting c2 (**Auto off timers**;  86).

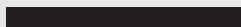
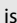



*Exposure meters off*

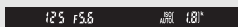


*Exposure meters on*

### **The Built-in Flash**

If additional lighting is required for correct exposure in  mode, the built-in flash will pop up automatically when the shutter-release button is pressed halfway. If the flash is raised, photographs can only be taken when the flash-ready indicator () is displayed. If the flash-ready indicator is not displayed, the flash is charging; remove your finger briefly from the shutter-release button and try again.

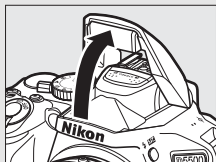


When the flash is not in use, return it to its closed position by pressing it gently downward till the latch clicks into place.

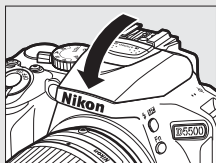



## Framing Photos in the Monitor

- 1 Rotate the live view switch.**  
The view through the lens will be displayed in the camera monitor (live view).

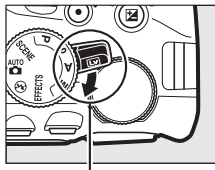

*Live view switch*

- 2 Ready the camera.**  
Hold the handgrip in your right hand and cradle the camera body or lens with your left.



When framing photographs in portrait (tall) orientation, hold the camera as shown at right.



### 3 Focus.


Press the shutter-release button halfway. The focus point will flash green while the camera focuses. If the camera is able to focus, the focus point will be displayed in green; if the camera is unable to focus, the focus point will flash red.




Focus point

### 4 Take the picture.


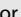
Press the shutter-release button the rest of the way down. The monitor turns off and the memory card access lamp lights during recording. *Do not eject the memory card or remove or disconnect the power source until the lamp has gone out and recording is complete.* When recording is complete, the photograph will be displayed in the monitor for a few seconds. Rotate the live view switch to exit live view.

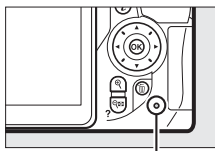

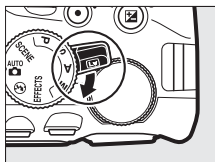


 




Memory card access lamp



### Automatic Scene Selection (Scene Auto Selector)

If live view is selected in  or  mode, the camera will automatically analyze the subject and select the appropriate shooting mode when autofocus is enabled. The selected mode is shown in the monitor.

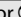

|   |                         |   |
|---|-------------------------|---|
|  | <b>Portrait</b>         | Human portrait subjects   |
|  | <b>Landscape</b>        | Landscapes and cityscapes   |
|  | <b>Close up</b>         | Subjects close to the camera  |
|  | <b>Night portrait</b>   | Portrait subjects framed against a dark background  |
|  | <b>Auto</b>             | Subjects suited to  or  mode or that do not fall into the categories listed above |
|  | <b>Auto (flash off)</b> |   |

### Shooting in Live View Mode


Although it will not appear in the final picture, distortion may be visible in the monitor if the camera is panned horizontally or an object moves at high speed through frame. Bright light sources may leave after-images in the monitor when the camera is panned. Bright spots may also appear. Flicker and banding visible in the monitor under fluorescent, mercury vapor, or sodium lamps can be reduced using **Flicker reduction** (87), although they may still be visible in the final photograph at some shutter speeds. When shooting in live view mode, avoid pointing the camera at the sun or other strong light sources. Failure to observe this precaution could result in damage to the camera's internal circuitry.


Live view ends automatically when the monitor is closed (closing the monitor does not end live view on televisions or other external displays).

### The Count Down Display

A count down will be displayed 30 s before live view ends automatically (the timer turns red 5 s before the auto off timer expires (86) or if live view is about to end to protect the internal circuits). Depending on shooting conditions, the timer may appear immediately when live view is selected.

## Viewing Photographs

Pressing  displays a picture in the monitor.

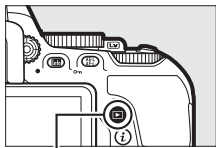

 *button*




Press  or  to view additional pictures.




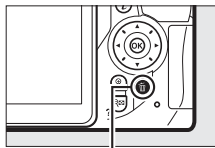
## Deleting Unwanted Pictures

Display the photograph you wish to delete. *Note that photographs can not be recovered once deleted.*

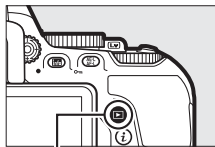


▶ button


Press ; a confirmation dialog will be displayed.



 button



Press the  button again to delete the picture.

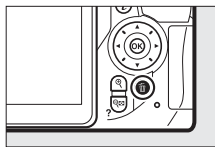


# Recording Movies


Movies can be recorded in live view mode.

## 1 Rotate the live view switch.

The view through the lens is displayed in the monitor.

### ✓ The Icon


A  icon indicates that movies can not be recorded.

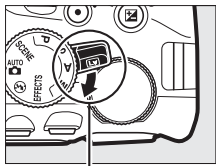

*Live view switch*


## 2 Ready the camera.

Hold the handgrip in your right hand and cradle the camera body or lens with your left.

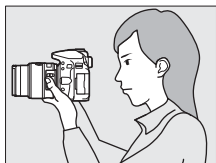

## 3 Focus.

Press the shutter-release button halfway to focus.

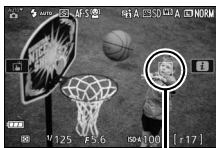


*Focus point*

---

## 4 Start recording.

Press the movie-record button to start recording. A recording indicator and the time available are displayed in the monitor.

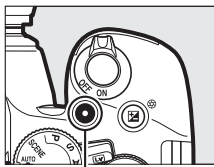

*Movie-record button*

### *Time remaining*




*Recording indicator*

---

## 5 End recording.

Press the movie-record button again to end recording. Recording will end automatically when the maximum length is reached (50), the memory card is full, another mode is selected, or the monitor is closed (closing the monitor does not end recording on televisions or other external displays). Rotate the live view switch to exit live view.

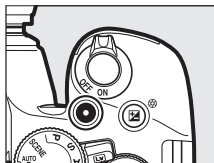

## ✎ Maximum Length

The maximum size for individual movie files is 4 GB; maximum length varies with the options selected for **Movie settings** > **Frame size/frame rate** and **Movie quality** in the shooting menu (☐ 85) as shown below. Note that depending on memory card write speed, shooting may end before this length is reached.

|   | Frame size/frame rate  |                         | Maximum length<br>(high movie quality ★/<br>normal movie quality) <sup>4</sup> |
|---|------------------------|-------------------------|--|
|   | Frame size<br>(pixels) | Frame rate <sup>1</sup> |  |
| $\frac{1080}{60} \frac{P^*}{50} / \frac{1080}{60} \frac{P}{50}$ | 1920 × 1080            | 60p <sup>2</sup>        | 10 min./   |
| $\frac{1080}{60} \frac{P^*}{50} / \frac{1080}{50} \frac{P}{50}$ |                        | 50p <sup>3</sup>        | 20 min.  |
| $\frac{1080}{60} \frac{P^*}{60} / \frac{1080}{60} \frac{P}{60}$ |                        | 30p <sup>2</sup>        | 20 min./<br>29 min. 59 s   |
| $\frac{1080}{65} \frac{P^*}{60} / \frac{1080}{65} \frac{P}{60}$ |                        | 25p <sup>3</sup>        |  |
| $\frac{1080}{62} \frac{P^*}{60} / \frac{1080}{62} \frac{P}{60}$ |                        | 24p                     |  |
| $\frac{720}{60} \frac{P^*}{60} / \frac{720}{60} \frac{P}{60}$   |                        | 60p <sup>2</sup>        |  |
| $\frac{720}{60} \frac{P^*}{50} / \frac{720}{60} \frac{P}{50}$   | 50p <sup>3</sup>       |                         |  |
| $\frac{424}{60} \frac{P^*}{60} / \frac{424}{60} \frac{P}{60}$   | 640 × 424              | 30p <sup>2</sup>        | 29 min. 59 s/  |
| $\frac{424}{65} \frac{P^*}{60} / \frac{424}{65} \frac{P}{60}$   |                        | 25p <sup>3</sup>        | 29 min. 59 s   |

- 1 Listed value. Actual frame rates for 60p, 50p, 30p, 25p, and 24p are 59.94, 50, 29.97, 25, and 23.976 fps respectively.
- 2 Available when **NTSC** is selected for **Video mode** (☐ 87).
- 3 Available when **PAL** is selected for **Video mode**.
- 4 Movies recorded in miniature effect mode are up to three minutes long when played back.



### ✔ The Count-Down Display

A count down will be displayed 30 s before movie recording ends automatically. Depending on shooting conditions, the timer may appear immediately when movie recording begins. Note that regardless of the amount of recording time available, live view will still end automatically when the timer expires. Wait for the internal circuits to cool before resuming movie recording.



### ✔ Recording Movies


Flicker, banding, or distortion may be visible in the monitor and in the final movie under fluorescent, mercury vapor, or sodium lamps or if the camera is panned horizontally or an object moves at high speed through frame (flicker and banding can be reduced using **Flicker reduction**; □ 87). Bright light sources may leave after-images when the camera is panned. Jagged edges, color fringing, moiré, and bright spots may also appear. Bright regions or bands may appear in some areas of the frame if the subject is briefly illuminated by a flash or other bright, momentary light source. When recording movies, avoid pointing the camera at the sun or other strong light sources. Failure to observe this precaution could result in damage to the camera's internal circuitry.

The camera can record both video and sound; do not cover the microphone during recording (□ 2). Note that the built-in microphone may record sounds made by the camera or lens during autofocus and vibration reduction.


Flash lighting can not be used during movie recording.


## Viewing Movies

Press  to start playback and then scroll through pictures until a movie (indicated by a  icon) is displayed.

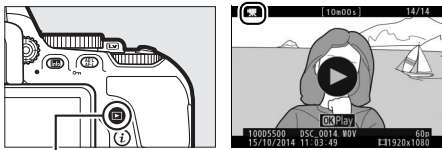





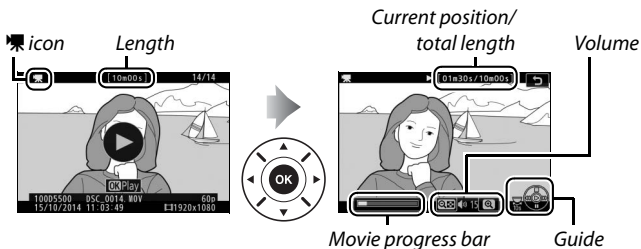







 button


Press  to start playback; your current position is indicated by the movie progress bar.





The following operations can be performed:


| To                            | Use   | Description   |
|-------------------------------|---|---|
| Pause                         |  | Pause playback.   |
| Play                          |  | Resume playback when movie is paused or during rewind/advance.  |
| Advance/<br>rewind            |  | Speed increases with each press, from 2x to 4x to 8x to 16x; keep pressed to skip to beginning or end of movie (first frame is indicated by  in top right corner of monitor, last frame by  ). If playback is paused, movie rewinds or advances one frame at a time; hold for continuous rewind or advance. |
| Skip 10 s                     |  | Rotate the command dial one stop to skip ahead or back 10 s.  |
| Adjust volume                 |  | Press  to increase volume,  (?) to decrease.  |
| Return to full-frame playback |  | Press  or  to exit to full-frame playback.  |

## Deleting Unwanted Movies


Display the movie you wish to delete (movies are indicated by  icons). *Note that movies can not be recovered once deleted.*

Press ; a confirmation dialog will be displayed.


Press the  button again to delete the movie.

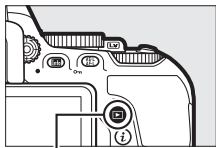

 button

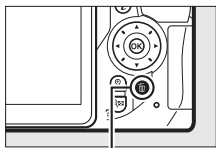


 button

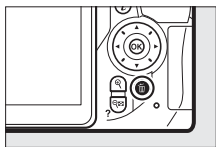

# Matching Settings to the Subject or Situation (Scene Mode)


The camera offers a choice of “scene” modes. Choosing a scene mode automatically optimizes settings to suit the selected scene, making creative photography as simple as selecting a mode, framing a picture, and shooting as described on page 35.

The following scenes can be selected by rotating the mode dial to **SCENE** and rotating the command dial until the desired scene appears in the monitor.

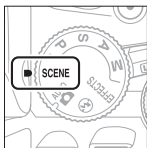

*Mode dial*

+

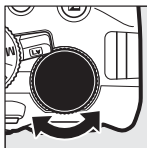

*Command dial*



*Monitor*

---

 Portrait

---

 Landscape


---

 Child

---

 Sports

---

 Close up

---

 Night Portrait


---

 Night Landscape

---

 Party/Indoor

---

 Beach/Snow

---

 Sunset

---

 Dusk/Dawn

---

 Pet Portrait

---

 Candlelight

---

 Blossom

---

 Autumn Colors

---

 Food

---

## **Portrait**

---

Use for portraits with soft, natural-looking skin tones. If the subject is far from the background or a telephoto lens is used, background details will be softened to lend the composition a sense of depth.

## **Landscape**

---

Use for vivid landscape shots in daylight.

**Note:** The built-in flash and AF-assist illuminator turn off.

## **Child**

---

Use for snapshots of children. Clothing and background details are vividly rendered, while skin tones remain soft and natural.

## **Sports**

---

Fast shutter speeds freeze motion for dynamic sports shots in which the main subject stands out clearly.

**Note:** The built-in flash and AF-assist illuminator turn off.

## **Close up**

---

Use for close-up shots of flowers, insects, and other small objects (a macro lens can be used to focus at very close ranges).

## **Night Portrait**

---

Use for a natural balance between the main subject and the background in portraits taken under low light.

## **Night Landscape**

---

Reduce noise and unnatural colors when photographing night landscapes, including street lighting and neon signs.

**Note:** The built-in flash and AF-assist illuminator turn off.

## **Party/Indoor**

---

Capture the effects of indoor background lighting. Use for parties and other indoor scenes.

## **Beach/Snow**

---

Capture the brightness of sunlit expanses of water, snow, or sand.

**Note:** The built-in flash and AF-assist illuminator turn off.

## **Sunset**

---

Preserves the deep hues seen in sunsets and sunrises.

**Note:** The built-in flash and AF-assist illuminator turn off.

## **Dusk/Dawn**

---

Preserves the colors seen in the weak natural light before dawn or after sunset.

**Note:** The built-in flash and AF-assist illuminator turn off.

## **Pet Portrait**

---

Use for portraits of active pets.

**Note:** The AF-assist illuminator turns off.

## **Candlelight**

---

For photographs taken by candlelight.

**Note:** The built-in flash turns off.

## **Blossom**

---

Use for fields of flowers, orchards in bloom, and other landscapes featuring expanses of blossoms.

**Note:** The built-in flash turns off.

## **Autumn Colors**

---


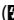
Captures the brilliant reds and yellows in autumn leaves.

**Note:** The built-in flash turns off.

## **Food**

---

Use for vivid photographs of food.

**Note:** For flash photography, press the  () button to raise the flash.

### **Preventing Blur**


Use a tripod to prevent blur caused by camera shake at slow shutter speeds.



# Special Effects


Special effects can be used when taking photographs and shooting movies.

The following effects can be selected by rotating the mode dial to **EFFECTS** and rotating the command dial until the desired option appears in the monitor.

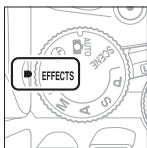

Mode dial

+

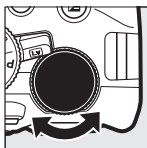

Command dial



Monitor

---

 Night Vision

---

 Super Vivid


---

 Pop


---

 Photo Illustration

---

 Toy Camera Effect

---

 Miniature Effect


---

 Selective Color

---

 Silhouette

---

 High Key

---

 Low Key

---

## **Night Vision**

Use under conditions of darkness to record monochrome images at high ISO sensitivities.

**Note:** Pictures may be affected by noise in the form of randomly-spaced bright pixels, fog, or lines. Autofocus is available in live view only; manual focus can be used if the camera is unable to focus. The built-in flash and AF-assist illuminator turn off.

## **VI** *Super Vivid*

---

Overall saturation and contrast are increased for a more vibrant image.

## **POP** *Pop*

---

Overall saturation is increased for a more lively image.

## *Photo Illustration*

---

Sharpen outlines and simplify coloring for a poster effect that can be adjusted in live view (☞ 63).

**Note:** Movies shot in this mode play back like a slide show made up of a series of stills.

## *Toy Camera Effect*

---

Create photos and movies that appear to have been shot with a toy camera. The effect can be adjusted in live view (☞ 64).

## *Miniature Effect*

---

Create photos that appear to be pictures of dioramas. Works best when shooting from a high vantage point. Miniature effect movies play back at high speed, compressing about 45 minutes of footage shot at 1920 × 1080/30p into a movie that plays back in about three minutes. The effect can be adjusted in live view (☞ 65).

**Note:** Sound is not recorded with movies. The built-in flash and AF-assist illuminator turn off.

## **Selective Color**

---

All colors other than the selected colors are recorded in black and white. The effect can be adjusted in live view (📖 66).

**Note:** The built-in flash turns off.

## **Silhouette**

---

Silhouette subjects against bright backgrounds.

**Note:** The built-in flash turns off.

## **High Key**

---

Use with bright scenes to create bright images that seem filled with light.

**Note:** The built-in flash turns off.

 




## **Low Key**

---

Use with dark scenes to create dark, low-key images with prominent highlights.

**Note:** The built-in flash turns off.

### **NEF (RAW)**

  NEF (RAW) recording is not available in , **VI**, **POP**, , , , and  modes. Pictures taken when an NEF (RAW) or NEF (RAW)+JPEG option is selected in these modes will be recorded as JPEG images. JPEG images created at settings of NEF (RAW)+JPEG will be recorded at the selected JPEG quality, while images recorded at a setting of NEF (RAW) will be recorded as fine-quality images.

### and Modes

Autofocus is not available during movie recording. The live view refresh rate will drop, together with the frame rate for continuous release modes; using autofocus during live view photography will disrupt the preview.

### **Preventing Blur**

Use a tripod to prevent blur caused by camera shake at slow shutter speeds.


## **Options Available in Live View**

Settings for the selected effect are adjusted in the live view display but apply during live view and viewfinder photography and movie recording.

### **Photo Illustration**

#### **1 Select live view.**

Rotate the live view switch. The view through the lens will be displayed in the monitor.

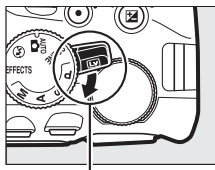

*Live view switch*

#### **2 Adjust outline thickness.**

Press **OK** to display the options shown at right. Press **←** or **→** to make outlines thicker or thinner.




#### **3 Press **OK**.**

Press **OK** to exit when settings are complete. To resume viewfinder photography, rotate the live view switch. The selected settings will continue in effect and will apply to photographs and movies recorded in live view or using the viewfinder.

## 1 Select live view.

Rotate the live view switch. The view through the lens will be displayed in the monitor.

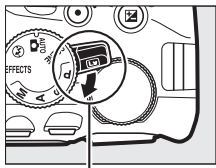

Live view switch

## 2 Adjust options.

Press **OK** to display the options shown at right. Press **Left Arrow** or **Right Arrow** to highlight **Vividness** or **Vignetting** and press **Left Arrow** or **Right Arrow** to change. Adjust vividness to make colors more or less saturated, vignetting to control the amount of vignetting.




## 3 Press **OK**.

Press **OK** to exit when settings are complete. To resume viewfinder photography, rotate the live view switch. The selected settings will continue in effect and will apply to photographs and movies recorded in live view or using the viewfinder.

**1 Select live view.**


Rotate the live view switch. The view through the lens will be displayed in the monitor.

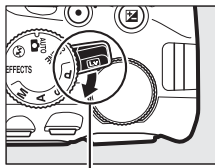


*Live view switch*

**2 Position the focus point.**


Use the multi selector to position the focus point in the area that will be in focus and then press the shutter-release button halfway to focus. To temporarily clear miniature effect options from the display and enlarge the view in the monitor for precise focus, press  $\odot$ . Press  $\odot$  (?) to restore the miniature effect display.

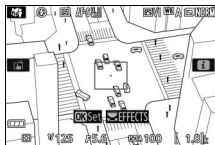**3 Display options.**

Press  $\odot$  to display miniature effect options.

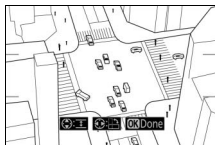**4 Adjust options.**

Press  $\odot$  or  $\odot$  to choose the orientation of the area that will be in focus and press  $\odot$  or  $\odot$  to adjust its width.

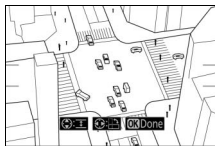


## 5 Press **OK**.

Press **OK** to exit when settings are complete. To resume viewfinder photography, rotate the live view switch. The selected settings will continue in effect and will apply to photographs and movies recorded in live view or using the viewfinder.

## ■ **Selective Color**

### 1 Select live view.


Rotate the live view switch. The view through the lens will be displayed in the monitor.

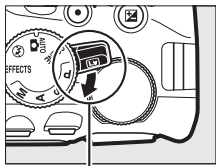

*Live view switch*

### 2 Display options.

Press **OK** to display selective color options.

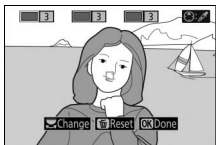

### 3 Select a color.

Frame an object in the white square in the center of the display and press **OK** to choose the color of the object as one that will remain in the final image (the camera may have difficulty detecting unsaturated colors; choose a saturated color). To zoom in on the center of the display for more precise color selection, press **Q**. Press **Q** (?) to zoom out.

*Selected color*





---

## 4 Choose the color range.

Press or to increase or decrease the range of similar hues that will be included in the final image. Choose from values between 1 and 7; note that higher values may include hues from other colors.

### Color range



---

## 5 Select additional colors.

To select additional colors, rotate the command dial to highlight another of the three color boxes at the top of the display and repeat



Steps 3 and 4 to select another color. Repeat for a third color if desired. To deselect the highlighted color, press (To remove all colors, press and hold . A confirmation dialog will be displayed; select **Yes**).

---

## 6 Press .

Press to exit when settings are complete. During shooting, only objects of the selected hues will be recorded in color; all others will be recorded in black-and-white. To resume viewfinder photography, rotate the live view switch. The selected settings will continue in effect and will apply to photographs and movies recorded in live view or using the viewfinder.

# P, S, A, and M Modes

P, S, A, and M modes offer different degrees of control over shutter speed and aperture:




| Mode                                   | Description   |
|--|---|
| <b>P</b> Programmed auto (☞ 68)        | Recommended for snapshots and in other situations in which there is little time to adjust camera settings. Camera sets shutter speed and aperture for optimal exposure. |
| <b>S</b> Shutter-priority auto (☞ 69)  | Use to freeze or blur motion. User chooses shutter speed; camera selects aperture for best results.   |
| <b>A</b> Aperture-priority auto (☞ 69) | Use to blur background or bring both foreground and background into focus. User chooses aperture; camera selects shutter speed for best results.                        |
| <b>M</b> Manual (☞ 70)                 | User controls both shutter speed and aperture. Set shutter speed to “Bulb” or “Time” for long time-exposures.   |

## **Mode P (Programmed Auto)**


This mode is recommended for snapshots or whenever you want to leave the camera in charge of shutter speed and aperture. The camera automatically adjusts shutter speed and aperture for optimal exposure in most situations.

### **Using the Built-in Flash**

For flash photography, press the  (☞ 72) button to raise the flash.

## **Mode S (Shutter-Priority Auto)**

In shutter-priority auto, you choose the shutter speed while the camera automatically selects the aperture that will produce the optimal exposure. Rotate the command dial to choose the desired shutter speed: rotate right for faster speeds, left for slower speeds.

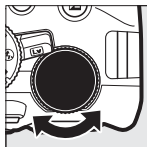


*Command dial*



## **Mode A (Aperture-Priority Auto)**


In aperture-priority auto, you choose the aperture while the camera automatically selects the shutter speed that will produce the optimal exposure. Rotate the command dial left for larger apertures (lower f-numbers), right for smaller apertures (higher f-numbers).

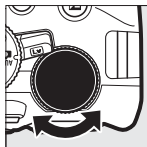


*Command dial*




## Mode M (Manual)

 In manual mode, you control both shutter speed and aperture. Checking the exposure indicator, adjust shutter speed and aperture. Shutter speed is selected by rotating the command dial (right for faster speeds, left for slower). To adjust aperture, keep the  button pressed while rotating the command dial (left for larger apertures/lower f-numbers and right for smaller apertures/higher f-numbers).


### Shutter speed

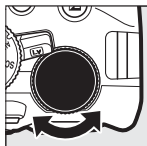


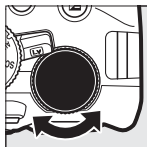
Command dial



### Aperture

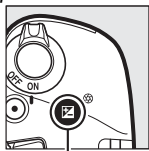

 button



Command dial




### The Exposure Indicator


| Optimal exposure | Underexposed by $\frac{1}{3}$ EV | Overexposed by over 2 EV |
|------------------|----------------------------------|--------------------------|
| - . 0 . +<br>    | - . 0 . +<br>                    | - . 0 . +<br> iiii>      |

## Shutter Speed and Aperture

Shutter speed and aperture are shown in the viewfinder and information display.

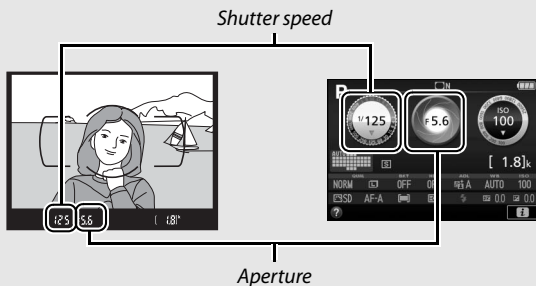

*Fast shutter speeds ( $1/1600$  s in this example) freeze motion.*

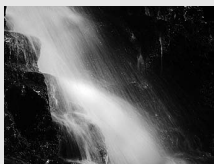

*Slow shutter speeds (here 1 s) blur motion.*





*Large apertures (such as  $f/5.6$ ; remember, the lower the  $f$ -number, the larger the aperture) blur details in front of and behind the main subject.*




*Small apertures ( $f/22$  in this case) bring both background and foreground into focus.*

## Exposure Compensation

In **P**, **S**, **A**, **SCENE**, and  modes, exposure compensation is used to alter exposure from the value suggested by the camera, making pictures brighter or darker ( 116). In general, positive values make the subject brighter while negative values make it darker.




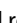
-1 EV

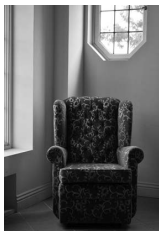




No exposure compensation




+1 EV

To choose a value for exposure compensation, keep the  () button pressed and rotate the command dial until the desired value is selected in the viewfinder or information display.

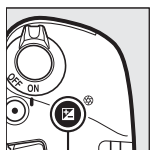

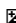 () button

+

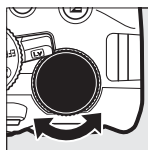

Command dial





Information display




-0.3 EV



+2 EV

Normal exposure can be restored by setting exposure compensation to  $\pm 0$ . Except in **SCENE** and  modes, exposure compensation is not reset when the camera is turned off (in **SCENE** and  modes, exposure compensation will be reset when another mode is selected or the camera is turned off).


### The Information Display

Exposure compensation options can also be accessed from the information display ( 12).



# Restoring Default Settings

The camera settings listed below and on page 76 can be restored to default values by holding the **MENU** and **info** buttons down together for more than two seconds (these buttons are marked by a green dot). The information display turns off briefly while settings are reset.

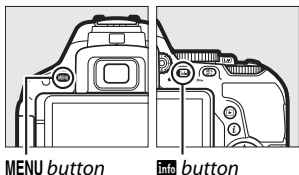












## ■ Settings Accessible from the Information Display

| Option                   | Default                 |
|--------------------------|-------------------------|
| Image quality            | JPEG normal             |
| Image size               | Large                   |
| Auto bracketing          |                         |
| <b>P, S, A, M</b>        | Off                     |
| HDR (high dynamic range) |                         |
| <b>P, S, A, M</b>        | Off                     |
| Active D-Lighting        |                         |
| <b>P, S, A, M</b>        | Auto                    |
| White balance            |                         |
| <b>P, S, A, M</b>        | Auto <sup>1</sup>       |
| ISO sensitivity          |                         |
| <b>P, S, A, M</b>        | 100                     |
| Other shooting modes     | Auto                    |
| Picture Control settings |                         |
| <b>P, S, A, M</b>        | Unmodified <sup>2</sup> |








1 Fine-tuning is also reset.

2 Current Picture Control only.



| Option  | Default                     |
|---|-----------------------------|
| Focus mode  |                             |
| Viewfinder  |                             |
| Shooting modes other than    | AF-A                        |
| Live view/movie   | AF-S                        |
| AF-area mode  |                             |
| Viewfinder  |                             |
|    | Single-point AF             |
|    | Dynamic-area AF (39 points) |
| AUTO <br>POP,  ,  ,  , P, S, A, M | Auto-area AF                |
| Live view/movie   |                             |
|    | Face-priority AF            |
| <br>A, M   | Wide-area AF                |
|    | Normal-area AF              |
| Metering  |                             |
| P, S, A, M  | Matrix metering             |
| Flash mode  |                             |
| AUTO   | Auto                        |
|    | Auto slow sync              |
|    | Auto+red-eye reduction      |
|    | Flash off                   |
| P, S, A, M  | Fill flash                  |
| Flash compensation  |                             |
| SCENE, P, S, A, M   | Off                         |
| Exposure compensation   |                             |
| SCENE,  , P, S, A, M   | Off                         |


## Other Settings

| Option  | Default      |
|---|--------------|
| NEF (RAW) recording   | 14-bit       |
| Exposure delay mode   | Off          |
| Release mode  |              |
|    | Continuous H |
| Other shooting modes  | Single frame |
| Focus point   | Center       |
| AE/AF lock hold   |              |
| Shooting modes other than  and  | Off          |
| Flexible program  |              |
| <b>P</b>  | Off          |
| Special effects mode  |              |
|    |              |
| Thickness   | - [▲] +      |
|    |              |
| Vividness   | 0            |
| Vignetting  | 0            |
|    |              |
| Orientation   | Landscape    |
| Width   | Normal       |
|    |              |
| Color   | Off          |
| Color range   | 3            |

# Wi-Fi

## What Wi-Fi Can Do for You

The camera can connect via Wi-Fi wireless networks to a smart device running Nikon's dedicated Wireless Mobile Utility app (📖 78).

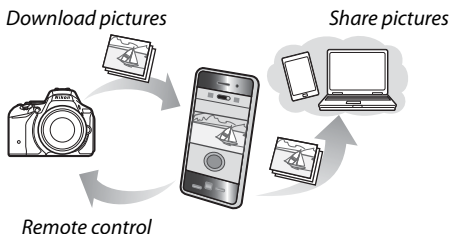

### 🔧 Installing the App

#### 1 Find the app.

On the smart device, connect to the Google Play service, the App Store, or another app marketplace and search for "Wireless Mobile Utility". For more information, see the instructions provided with the smart device.

#### 2 Install the app.

Read the app description and install the app. A pdf manual for the Wireless Mobile Utility is available for download at the following URLs:

- **Android:** <http://nikonimglib.com/ManDL/WMAU/>
- **iOS:** <http://nikonimglib.com/ManDL/WMAU-ios/>



Android



iOS

## Accessing the Camera

Before connecting via Wi-Fi (wireless LAN), install the Wireless Mobile Utility on your Android or iOS smart device. Instructions for accessing the camera vary with the type of connection used by the smart device.

### Android

- **Push-button WPS:** If the smart device supports push-button WPS (i.e., has a **WPS button connection** option in its **Wi-Fi settings** menu), you can use this easy method to connect to the smart device (📖 79)
- **PIN-entry WPS:** If the smart device supports WPS, you can use the camera to establish a connection by entering the PIN displayed by the smart device (📖 80)
- **View SSID:** If the smart device does not support WPS, you can connect by selecting the camera SSID on the smart device (📖 81)

### iOS

- **View SSID:** Connect by selecting the camera SSID on the smart device (📖 81)



### 🔒 Security

If you do not use WPS when connecting for the first time, the connection will not be protected by a password or other form of security. Security settings can be configured in the Wireless Mobile Utility once a connection is established. More information can be found in the Wireless Mobile Utility manual, which is available for download in pdf format from the following URLs:

- **Android:** <http://nikonimglib.com/ManDL/WMAU/>
- **iOS:** <http://nikonimglib.com/ManDL/WMAU-ios/>

## WPS (Android Only)


- 1 Enable the camera's built-in Wi-Fi.**  
Highlight **Wi-Fi** in the setup menu and press **▶**. Highlight **Network connection** and press **▶**, then highlight **Enable** and press **OK**. Wait a few seconds for Wi-Fi to activate.

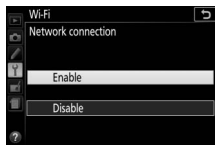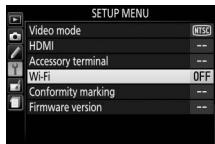


## **2 Connect.**

Enable WPS button connections on the camera and smart device:

- **Camera:** Highlight **Network settings** and press **▶**.

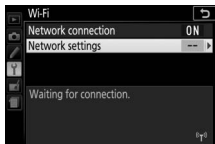

Highlight **Push-button WPS** and press **▶** to ready the camera for a WPS connection. The camera will wait about two minutes for a WPS connection request from the smart device. To extend the wait time, press **OK**.

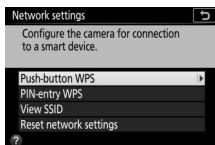

- **Smart device:** Select **Wi-Fi settings > WPS button connection**.

### 3 Launch the Wireless Mobile Utility.

Launch the Wireless Mobile Utility on the smart device. The main dialog will be displayed.

## PIN Entry (Android Only)

### 1 Enable the camera's built-in Wi-Fi.

Highlight **Wi-Fi** in the setup menu and press . Highlight **Network connection** and press , then highlight **Enable** and press . Wait a few seconds for Wi-Fi to activate.



### 2 Select Network settings > PIN-entry WPS.






Highlight **Network settings** and press .

Highlight **PIN-entry WPS** and press .



---

### 3 Enter the PIN.

Enter the PIN displayed by the smart device. Press  or  to highlight digits and press  or  to change. Press  when entry is complete.

---

### 4 Launch the Wireless Mobile Utility.




Launch the Wireless Mobile Utility on the smart device. The main dialog will be displayed.



---

## SSID (Android and iOS)

---

### 1 Enable the camera's built-in Wi-Fi.


Highlight **Wi-Fi** in the setup menu and press . Highlight **Network connection** and press , then highlight **Enable** and press . Wait a few seconds for Wi-Fi to activate.

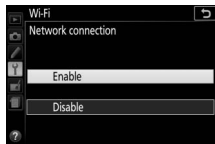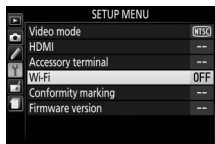


---

### 2 Display the camera SSID.

Highlight **Network settings** and press .

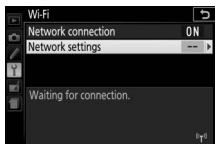

Highlight **View SSID** and press .

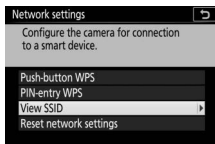

---

**3 Select the camera SSID.**

Select the camera SSID in the list of networks displayed by the smart device.

---

**4 Launch the Wireless Mobile Utility.**

Launch the Wireless Mobile Utility on the smart device. The main dialog will be displayed.



## ■ Terminating the Connection

Wi-Fi can be disabled by:

- Selecting **Wi-Fi > Network connection > Disable** in the camera setup menu
- Starting movie recording
- Turning the camera off

## ■ Restoring Default Settings

To restore default network settings, select **Wi-Fi > Network settings > Reset network settings**. A confirmation dialog will be displayed; highlight **Yes** and press **OK** to restore default network settings.

### ☑ The Wi-Fi Display

While Wi-Fi is enabled, a **Wi-Fi** icon will flash in the information display. The icon will stop flashing once a connection has been established and the camera is exchanging data with the smart device.




### ☑ Wi-Fi

Read the warnings on pages xviii to xx before using the Wi-Fi function. To disable Wi-Fi in settings in which its use is prohibited, select **Wi-Fi > Network connection > Disable** in the camera setup menu. Note that Eye-Fi cards can not be used while Wi-Fi is enabled and that the standby timer will not turn off while the Wireless Mobile Utility app on the smart device is communicating with the camera. If no data are exchanged for about 5 minutes, the standby timer will turn off. The camera Wi-Fi function is only available when a memory card is inserted and can not be used when a USB or HDMI cable is connected. To prevent loss of power while connected, charge the battery before enabling the network connection.

# Camera Menu

Most shooting, playback, and setup options can be accessed from the camera menu. To view the menus, press the MENU button.

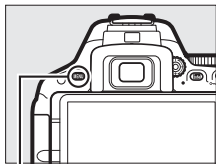


MENU button

## Tabs

Choose from the following menus:

- : Playback
- : Shooting
- : Custom Settings
- : Setup
- : Retouch
- : Recent settings or My Menu (defaults to **Recent settings**)

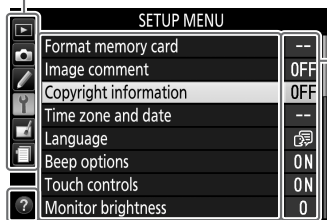

Current settings are shown by icons.

## Menu options

Options in current menu.

**Help icon** (📖 89)

# Menu Options

## ■ ■ ▶ *Playback Menu: Managing Images*

|                          |                                |
|--------------------------|--------------------------------|
| Delete                   | Rotate tall                    |
| Playback folder          | Slide show                     |
| Playback display options | DPOF print order               |
| Image review             | Rating                         |
| Auto image rotation      | Select to send to smart device |

## ■ ■ 📷 *Shooting Menu: Shooting Options*

|                          |                          |
|--------------------------|--------------------------|
| Reset shooting menu      | Color space              |
| Storage folder           | Active D-Lighting        |
| File naming              | HDR (high dynamic range) |
| Image quality            | Release mode             |
| Image size               | Long exposure NR         |
| NEF (RAW) recording      | High ISO NR              |
| ISO sensitivity settings | Vignette control         |
| White balance            | Auto distortion control  |
| Set Picture Control      | Interval timer shooting  |
| Manage Picture Control   | Optical VR *             |
|                          | Movie settings           |

\* Available only with lenses that support this item.

## ■ Custom Settings: Fine-Tuning Camera Settings

|  |  |
|--|--|
| <b>Reset custom settings</b>             | <b>d Shooting/display</b>                                    |
| <b>a Autofocus</b>                       | <b>d1 Exposure delay mode</b>                                |
| <b>a1 AF-C priority selection</b>        | <b>d2 File number sequence</b>                               |
| <b>a2 Number of focus points</b>         | <b>d3 Viewfinder grid display</b>                            |
| <b>a3 Built-in AF-assist illuminator</b> | <b>d4 Date stamp</b>   |
| <b>a4 Rangefinder</b>                    | <b>d5 Reverse indicators</b>                                 |
| <b>a5 Manual focus ring in AF mode *</b> | <b>e Bracketing/flash</b>                                    |
| <b>b Exposure</b>                        | <b>e1 Flash cntrl for built-in flash/<br/>Optional flash</b> |
| <b>b1 EV steps for exposure cntrl</b>    | <b>e2 Auto bracketing set</b>                                |
| <b>b2 ISO display</b>                    | <b>f Controls</b>  |
| <b>c Timers/AE lock</b>                  | <b>f1 Assign Fn button</b>                                   |
| <b>c1 Shutter-release button AE-L</b>    | <b>f2 Assign AE-L/AF-L button</b>                            |
| <b>c2 Auto off timers</b>                | <b>f3 Assign touch Fn</b>                                    |
| <b>c3 Self-timer</b>                     | <b>f4 Reverse dial rotation</b>                              |
| <b>c4 Remote on duration (ML-L3)</b>     |  |

\* Available only with lenses that support this item.

## Setup Menu: Camera Setup

|                       |                             |
|-----------------------|-----------------------------|
| Format memory card    | Lock mirror up for cleaning |
| Image comment         | Image Dust Off ref photo    |
| Copyright information | Flicker reduction           |
| Time zone and date    | Slot empty release lock     |
| Language              | Video mode                  |
| Beep options          | HDMI                        |
| Touch controls        | Accessory terminal          |
| Monitor brightness    | Wi-Fi                       |
| Info display format   | Eye-Fi upload*              |
| Auto info display     | Conformity marking          |
| Info display auto off | Firmware version            |
| Clean image sensor    |                             |

\* Only available when compatible Eye-Fi memory card is inserted.

## Retouch Menu: Creating Retouched Copies


|                      |                          |
|----------------------|--------------------------|
| NEF (RAW) processing | Monochrome               |
| Trim                 | Image overlay            |
| Resize               | Color outline            |
| D-Lighting           | Photo illustration       |
| Quick retouch        | Color sketch             |
| Red-eye correction   | Miniature effect         |
| Straighten           | Selective color          |
| Distortion control   | Painting                 |
| Perspective control  | Edit movie               |
| Fisheye              | Side-by-side comparison* |
| Filter effects       |                          |

\* Available only if retouch menu is displayed by pressing **z** and selecting **Retouch** in full-frame playback when a retouched image or original is displayed.

## ■ ■ **Recent Settings** / **My Menu (Defaults to Recent Settings)**


The recent settings menu lists the twenty most recently used settings. My Menu lets you access a customized menu of up to 20 options selected from the playback, shooting, Custom Settings, setup, and retouch menus.

### **For More Information**

Information on individual menu options is available using the camera's on-board help ( 89).


## Using Camera Menu

The multi selector and **OK** button are used to navigate the camera menus.

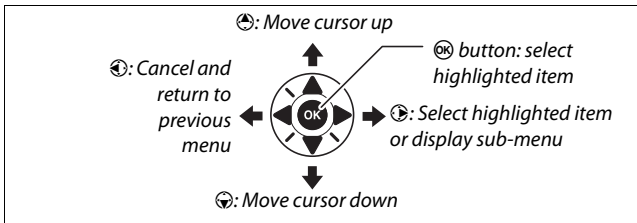


### The **?** (Help) Icon

If a **?** icon is displayed at the bottom left corner of the monitor, a description of the currently selected option or menu can be displayed by pressing the **?** button. Press **↑** or **↓** to scroll through the display. Press **?** again to return to the menus.

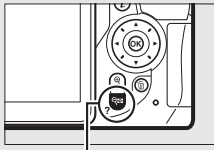


**?** button

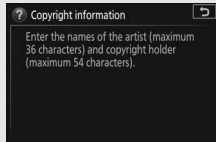


Follow the steps below to navigate the menus.

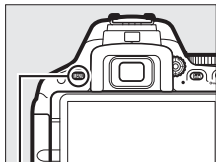

- 1 Display the menus.**  
Press the **MENU** button to display the menus.





MENU button


- 2 Highlight the icon for the current menu.**  
Press  to highlight the icon for the current menu.



- 3 Select a menu.**  
Press  or  to select the desired menu.

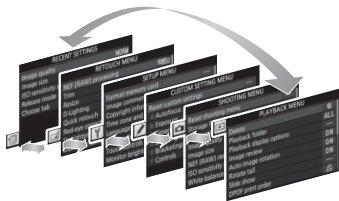


- 4 Position the cursor in the selected menu.**  
Press  to position the cursor in the selected menu.

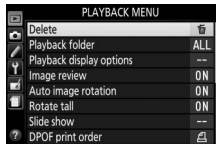




## 5 Highlight a menu item.

Press or to highlight a menu item.

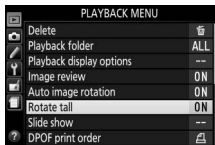


## 6 Display options.

Press to display options for the selected menu item.

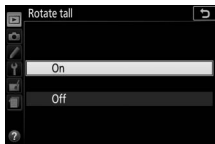

## 7 Highlight an option.

Press or to highlight an option.

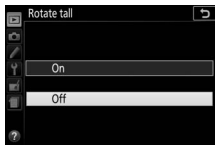

## 8 Select the highlighted item.

Press to select the highlighted item. To exit without making a selection, press the **MENU** button.



Note the following:

- Menu items that are displayed in gray are not currently available.
- While pressing generally has the same effect as pressing , there are some cases in which selection can only be made by pressing .
- To exit the menus and return to shooting mode, press the shutter-release button halfway (□ 38).

# ViewNX 2

## Installing ViewNX 2

To upload, view, edit, and share photos and movies, download the ViewNX 2 installer from the following website and follow the on-screen instructions to complete installation. An Internet connection is required. For system requirements and other information, see the Nikon website for your region (📖 xvii).

<http://downloadcenter.nikonimglib.com/>

Nikon also offers Capture NX-D image fine-tuning software, available for download from:

<http://downloadcenter.nikonimglib.com/>

### Capture NX-D

Use Nikon's Capture NX-D software to fine-tune photos or to change settings for NEF (RAW) pictures and save them in other formats. Capture NX-D also offers an Image Dust Off feature that processes NEF (RAW) images to remove image artifacts caused by dust inside the camera.

### Use the Latest Versions

Be sure to use the latest version. Using a version that does not support your camera may result in difficulties copying NEF (RAW) images to your computer.


## Using ViewNX 2

### Copy Pictures to the Computer

Before proceeding, be sure you have installed ViewNX 2 (□ 92).

#### 1 Connect the USB cable.

After turning the camera off and ensuring that a memory card is inserted, connect the supplied USB cable as shown and then turn the camera on.

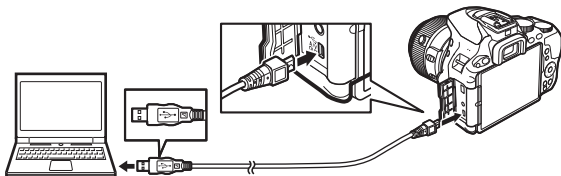

#### 2 Start Nikon Transfer 2 component of ViewNX 2.

If a message is displayed prompting you to choose a program, select Nikon Transfer 2.

##### Windows 7

If the following dialog is displayed, select Nikon Transfer 2 as described below.


- 1 Under **Import pictures and videos**, click **Change program**. A program selection dialog will be displayed; select **Import File using Nikon Transfer 2** and click **OK**.



- 2 Double-click **Import File**.

## Windows 8.1

Windows 8.1 may display an AutoPlay prompt when the camera is connected. Tap or click the dialog and then tap or click **Import File/Nikon Transfer 2** to select Nikon Transfer 2.

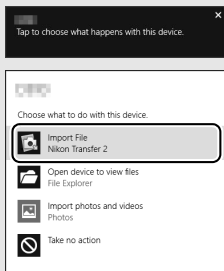

## 3 Click **Start Transfer**.

At default settings, pictures on the memory card will be copied to the computer.



**Start Transfer**

## 4 Terminate the connection.



When transfer is complete, turn the camera off and disconnect the USB cable.


# Technical Notes

Read this chapter for information on compatible accessories, cleaning and storing the camera, and what to do if an error message is displayed or you encounter problems using the camera.

## Compatible Lenses

This camera supports autofocus with AF-S, AF-P, and AF-I CPU lenses only. AF-S lenses have names beginning with **AF-S**, AF-P lenses with **AF-P**, and AF-I lenses with **AF-I**. Autofocus is not supported with other autofocus (AF) lenses. The following table lists the features available with compatible lenses in viewfinder photography:

| Camera setting<br><br>Lens/accessory     | Focus mode     |                                  |    | Shooting mode |             | Metering system   |       |   |
|--|----------------|----------------------------------|----|---------------|-------------|---|-------|---|
|  | AF             | MF (with electronic rangefinder) | MF | M             | Other modes |  |       |  |
|  |                |                                  |    |               |             | 3D  | Color |   |
| AF-S, AF-P, AF-I NIKKOR                  | ✓              | ✓                                | ✓  | ✓             | ✓           | ✓   | —     | ✓ <sup>1</sup>  |
| Other type G or D AF NIKKOR              | —              | ✓                                | ✓  | ✓             | ✓           | ✓   | —     | ✓ <sup>1</sup>  |
| PC-E NIKKOR series <sup>2,3</sup>        | —              | ✓ <sup>4</sup>                   | ✓  | ✓             | ✓           | ✓   | —     | ✓ <sup>1</sup>  |
| PC Micro 85mm f/2.8D <sup>5</sup>        | —              | ✓ <sup>4</sup>                   | ✓  | ✓             | —           | ✓   | —     | ✓ <sup>1</sup>  |
| AF-S/AF-I teleconverter                  | ✓ <sup>6</sup> | ✓ <sup>6</sup>                   | ✓  | ✓             | ✓           | ✓   | —     | ✓ <sup>1</sup>  |
| Other AF NIKKOR (except lenses for F3AF) | —              | ✓ <sup>7</sup>                   | ✓  | ✓             | ✓           | —   | ✓     | ✓ <sup>1</sup>  |
| AI-P NIKKOR                              | —              | ✓ <sup>8</sup>                   | ✓  | ✓             | ✓           | —   | ✓     | ✓ <sup>1</sup>  |

1 Spot metering meters selected focus point ( 12).

2 The tilt knob for the PC-E NIKKOR 24mm f/3.5D ED may contact the camera body when the lens is revolved.

- 3 Shifting and/or tilting the lens interferes with exposure.
  - 4 Can not be used with shifting or tilting.
  - 5 Optimal exposure will only be achieved if the lens is at maximum aperture and the lens is not shifted or tilted.
  - 6 With maximum effective aperture of f/5.6 or faster.
  - 7 When AF 80–200mm f/2.8, AF 35–70mm f/2.8, AF 28–85mm f/3.5–4.5 (New), or AF 28–85mm f/3.5–4.5 lenses are zoomed all the way in at the minimum focus distance, the in-focus indicator (●) may be displayed when the image on the matte screen in the viewfinder is not in focus. Before shooting, confirm that the image in the viewfinder screen is in focus.
  - 8 With maximum aperture of f/5.6 or faster.
- Noise in the form of lines may appear during autofocus when movies are recorded at high ISO sensitivities. Use manual focus or focus lock.

 **IX NIKKOR Lenses**

IX NIKKOR lenses can not be used.

## Other Accessories

At the time of writing, the following accessories were available for the D5500.


|                              |   |
|------------------------------|---|
| <b>Power sources</b>         | <ul style="list-style-type: none"><li>• <b>Rechargeable Li-ion Battery EN-EL14a</b> (□ 24): Additional EN-EL14a batteries are available from local retailers and Nikon-authorized service representatives. EN-EL14 batteries can also be used.</li><li>• <b>Battery Charger MH-24</b> (□ 24): Recharge EN-EL14a and EN-EL14 batteries.</li><li>• <b>Power Connector EP-5A, AC Adapter EH-5b</b>: These accessories can be used to power the camera for extended periods (EH-5a and EH-5 AC adapters can also be used). A power connector EP-5A is required to connect the camera to the EH-5b, EH-5a, or EH-5.</li></ul>  |
| <b>Accessory shoe covers</b> | <p><b>Accessory Shoe Cover BS-1</b>: A cover protecting the accessory shoe. The accessory shoe is used for optional flash units.</p>  |
| <b>Filters</b>               | <ul style="list-style-type: none"><li>• Filters intended for special-effects photography may interfere with autofocus or the electronic rangefinder.</li><li>• The D5500 can not be used with linear polarizing filters. Use C-PL or C-PL II circular polarizing filters instead.</li><li>• NC filters are recommended for protecting the lens.</li><li>• To prevent ghosting, use of a filter is not recommended when the subject is framed against a bright light, or when a bright light source is in the frame.</li><li>• Center-weighted metering is recommended with filters with exposure factors (filter factors) over 1 × (Y44, Y48, Y52, O56, R60, X0, X1, C-PL, ND2S, ND4, ND4S, ND8, ND8S, ND400, A2, A12, B2, B8, B12). See the filter manual for details.</li></ul> |

## Viewfinder eyepiece accessories

- **DK-5 Eyepiece Cap:** Prevents light entering via the viewfinder from appearing in the photograph or interfering with exposure.
- **DK-20C Eyepiece Correction Lenses:** Lenses are available with diopters of  $-5$ ,  $-4$ ,  $-3$ ,  $-2$ ,  $0$ ,  $+0.5$ ,  $+1$ ,  $+2$ , and  $+3\text{ m}^{-1}$  when the camera diopter adjustment control is in the neutral position ( $-1\text{ m}^{-1}$ ). Use eyepiece correction lenses only if the desired focus can not be achieved with the built in diopter adjustment control ( $-1.7$  to  $+0.5\text{ m}^{-1}$ ). Test eyepiece correction lenses before purchase to ensure that the desired focus can be achieved. The rubber eyecup can not be used with eyepiece correction lenses.
- **Magnifier DG-2:** The DG-2 magnifies the scene displayed in the center of the viewfinder for greater precision during focusing. Eyepiece adapter required (available separately). Note that because the DG-2 interferes with the eye sensor, you may find it necessary to select **Off** for the **Info display auto off** item in the setup menu when this accessory is attached.
- **Eyepiece Adapter DK-22:** The DK-22 is used when attaching the DG-2 magnifier. The monitor can not be rotated with the adapter in place.
- **Right-Angle Viewing Attachment DR-6:** The DR-6 attaches at a right angle to the viewfinder eyepiece, allowing the image in the viewfinder to be viewed at right angles to the lens (for example, from directly above when the camera is horizontal). The monitor can not be rotated with the attachment in place. In addition, because the DR-6 interferes with the eye sensor, you may find it necessary to select **Off** for the **Info display auto off** item in the setup menu when this accessory is attached.



|  |  |
|--|--|
| <b>Software</b>  | <p><b>Camera Control Pro 2:</b> Control the camera remotely from a computer to record movies and photographs and save photographs directly to the computer hard disk.</p> <p><b>Note:</b> Use the latest versions of Nikon software; see the websites listed on page xvii for the latest information on supported operating systems. At default settings, Nikon Message Center 2 will periodically check for updates to Nikon software and firmware while you are logged in to an account on the computer and the computer is connected to the Internet. A message is automatically displayed when an update is found.</p>   |
| <b>Body cap</b>  | <p><b>Body Cap BF-1B/Body Cap BF-1A:</b> The body cap keeps the mirror, viewfinder screen, and image sensor free of dust when a lens is not in place.</p>  |
| <b>Remote controls/<br/>wireless<br/>remote<br/>controller</b> | <ul style="list-style-type: none"> <li>• <b>Wireless Remote Control ML-L3</b> (☐ 5): The ML-L3 uses a 3 V CR2025 battery.       <div data-bbox="290 633 937 793" data-label="Image"> </div> <p>Pressing the battery-chamber latch to the right (①), insert a fingernail into the gap and open the battery chamber (②). Ensure that the battery is inserted in the correct orientation (④).</p> </li> <li>• <b>Wireless Remote Controller WR-R10/WR-T10:</b> When a WR-R10 wireless remote controller is attached, the camera can be controlled wirelessly using a WR-T10 wireless remote controller.</li> <li>• <b>Wireless Remote Controller WR-1:</b> The WR-1 can function as either a transmitter or a receiver and is used in combination either with another WR-1 or a WR-R10 or WR-T10 wireless remote controller. For example, a WR-1 can be connected to the accessory terminal for use as a receiver, allowing the shutter to be released remotely by another WR-1 acting as a transmitter.</li> </ul> |
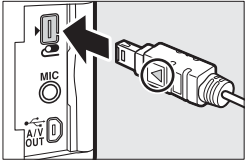
|  |   |
|--|---|
| <b>Microphones</b>                       | <b>Stereo Microphone ME-1</b>   |
| <b>Accessory terminal accessories</b>    | <p>The D5500 is equipped with an accessory terminal for <b>WR-1</b> and <b>WR-R10 wireless remote controllers</b>, <b>MC-DC2 remote cords</b>, and <b>GP-1/GP-1A GPS units</b>, which connect with the ◀ mark on the connector aligned with the ▶ next to the accessory terminal (close the connector cover when the terminal is not in use).</p>  |
| <b>USB and A/V connector accessories</b> | <ul style="list-style-type: none"> <li>• <b>UC-E23 and UC-E6 USB cables</b> (□ 93): The supplied UC-E23 cable is not available for separate purchase; purchase UC-E6 cables instead.</li> <li>• <b>EG-CP16 audio/video cables</b></li> </ul>  |
| <b>HDMI cables</b>                       | <b>HDMI Cable HC-E1:</b> An HDMI cable with a type C connector for connection to the camera and a type A connector for connection to HDMI devices.  |

### **Optional Accessories**

Availability may vary with country or region. See our website or brochures for the latest information.

## **Approved Memory Cards**

The following SD memory cards have been tested and approved for use in the camera. Cards with class 6 or faster write speeds are recommended for movie recording. Recording may end unexpectedly when cards with slower write speeds are used.

|                      | <b>SD memory cards</b> | <b>SDHC memory cards<sup>2</sup></b>         | <b>SDXC memory cards<sup>3</sup></b> |
|----------------------|------------------------|--|--------------------------------------|
| <b>SanDisk</b>       | 2 GB <sup>1</sup>      | 4 GB, 8 GB, 16 GB, 32 GB                     | 64 GB, 128 GB                        |
| <b>Toshiba</b>       | —                      |  | 64 GB                                |
| <b>Panasonic</b>     | 2 GB <sup>1</sup>      | 4 GB, 6 GB, 8 GB, 12 GB, 16 GB, 24 GB, 32 GB | 48 GB, 64 GB                         |
| <b>Lexar Media</b>   |                        | 4 GB, 8 GB, 16 GB, 32 GB                     | —                                    |
| <b>Platinum II</b>   | —                      | 8 GB, 16 GB, 32 GB                           | 64 GB                                |
| <b>Professional</b>  |                        |  | 64 GB, 128 GB, 256 GB                |
| <b>Full-HD Video</b> |                        | 4 GB, 8 GB, 16 GB                            | —                                    |

- 1 Check that any card readers or other devices with which the card will be used support 2 GB cards.
- 2 Check that any card readers or other devices with which the card will be used are SDHC-compliant. The camera supports UHS-I.
- 3 Check that any card readers or other devices with which the card will be used are SDXC-compliant. The camera supports UHS-I.



Other cards have not been tested. For more details on the above cards, please contact the manufacturer.

## Caring for the Camera

### Storage

When the camera will not be used for an extended period, remove the battery and store it in a cool, dry area with the terminal cover in place. To prevent mold or mildew, store the camera in a dry, well-ventilated area. Do not store your camera with naphtha or camphor moth balls or in locations that:

- are poorly ventilated or subject to humidities of over 60%
- are next to equipment that produces strong electromagnetic fields, such as televisions or radios
- are exposed to temperatures above 50 °C (122 °F) or below -10 °C (14 °F)

### Cleaning

|                                     |  |
|-------------------------------------|--|
| <b>Camera body</b>                  | Use a blower to remove dust and lint, then wipe gently with a soft, dry cloth. After using the camera at the beach or seaside, wipe off sand or salt with a cloth lightly dampened in distilled water and dry thoroughly. <b>Important:</b> <i>Dust or other foreign matter inside the camera may cause damage not covered under warranty.</i> |
| <b>Lens, mirror, and viewfinder</b> | These glass elements are easily damaged. Remove dust and lint with a blower. If using an aerosol blower, keep the can vertical to prevent the discharge of liquid. To remove fingerprints and other stains, apply a small amount of lens cleaner to a soft cloth and clean with care.  |
| <b>Monitor</b>                      | Remove dust and lint with a blower. When removing fingerprints and other stains, wipe the surface lightly with a soft cloth or chamois leather. Do not apply pressure, as this could result in damage or malfunction.  |

*Do not use alcohol, thinner, or other volatile chemicals.*

## Caring for the Camera and Battery: Cautions

**Do not drop:** The product may malfunction if subjected to strong shocks or vibration.

**Keep dry:** This product is not waterproof, and may malfunction if immersed in water or exposed to high levels of humidity. Rusting of the internal mechanism can cause irreparable damage.

**Avoid sudden changes in temperature:** Sudden changes in temperature, such as those that occur when entering or leaving a heated building on a cold day, can cause condensation inside the device. To prevent condensation, place the device in a carrying case or plastic bag before exposing it to sudden changes in temperature.

**Keep away from strong magnetic fields:** Do not use or store this device in the vicinity of equipment that generates strong electromagnetic radiation or magnetic fields. Strong static charges or the magnetic fields produced by equipment such as radio transmitters could interfere with the monitor, damage data stored on the memory card, or affect the product's internal circuitry.

**Do not leave the lens pointed at the sun:** Do not leave the lens pointed at the sun or other strong light source for an extended period. Intense light may cause the image sensor to deteriorate or produce a white blur effect in photographs.

**Turn the product off before removing or disconnecting the power source:** Do not unplug the product or remove the battery while the product is on or while images are being recorded or deleted. Forcibly cutting power in these circumstances could result in loss of data or in damage to product memory or internal circuitry. To prevent an accidental interruption of power, avoid carrying the product from one location to another while the AC adapter is connected.

**Cleaning:** When cleaning the camera body, use a blower to gently remove dust and lint, then wipe gently with a soft, dry cloth. After using the camera at the beach or seaside, wipe off any sand or salt using a cloth lightly dampened in pure water and then dry the camera thoroughly.

The lens and mirror are easily damaged. Dust and lint should be gently removed with a blower. When using an aerosol blower, keep the can vertical to prevent discharge of liquid. To remove fingerprints and other stains from the lens, apply a small amount of lens cleaner to a soft cloth and wipe the lens carefully.

See the *Reference Manual* for information on cleaning the image sensor.

**Do not touch the shutter curtain:** The shutter curtain is extremely thin and easily damaged. Under no circumstances should you exert pressure on the curtain, poke it with cleaning tools, or subject it to powerful air currents from a blower. These actions could scratch, deform, or tear the curtain.

**Storage:** To prevent mold or mildew, store the camera in a dry, well-ventilated area. If you are using an AC adapter, unplug the adapter to prevent fire. If the product will not be used for an extended period, remove the battery to prevent leakage and store the camera in a plastic bag containing a desiccant. Do not, however, store the camera case in a plastic bag, as this may cause the material to deteriorate. Note that desiccant gradually loses its capacity to absorb moisture and should be replaced at regular intervals.

To prevent mold or mildew, take the camera out of storage at least once a month. Turn the camera on and release the shutter a few times before putting it away.

Store the battery in a cool, dry place. Replace the terminal cover before putting the battery away.

**Notes on the monitor:** The monitor is constructed with extremely high precision; at least 99.99% of pixels are effective, with no more than 0.01% being missing or defective. Hence while these displays may contain pixels that are always lit (white, red, blue, or green) or always off (black), this is not a malfunction and has no effect on images recorded with the device.

Images in the monitor may be difficult to see in a bright light.

Do not apply pressure to the monitor, as this could cause damage or malfunction. Dust or lint on the monitor can be removed with a blower. Stains can be removed by wiping lightly with a soft cloth or chamois leather. Should the monitor break, care should be taken to avoid injury from broken glass and to prevent liquid crystal from the monitor touching the skin or entering the eyes and mouth.

**Moiré:** Moiré is an interference pattern created by the interaction of an image containing a regular, repeating grid, such as the pattern of weave in cloth or windows in a building, with the camera image sensor grid. If you notice moiré in your photographs, try changing the distance to the subject, zooming in and out, or changing the angle between the subject and the camera.

**The battery and charger:** Batteries may leak or explode if improperly handled. *Read and follow the warnings and cautions on pages ix–xii of this manual.* Observe the following precautions when handling batteries:

- Use only batteries approved for use in this equipment.
- Do not expose the battery to flame or excessive heat.
- Keep the battery terminals clean.
- Turn the product off before replacing the battery.
- Remove the battery from the camera or charger when not in use and replace the terminal cover. These devices draw minute amounts of charge even when off and could draw the battery down to the point that it will no longer function. If the battery will not be used for some time, insert it in the camera and run it flat before removing it and storing it in a location with an ambient temperature of 15 °C to 25 °C (59 °F to 77 °F; avoid hot or extremely cold locations). Repeat this process at least once every six months.

- Turning the camera on and off repeatedly when the battery is fully discharged will shorten battery life. Batteries that have been fully discharged must be charged before use.
- The internal temperature of the battery may rise while the battery is in use. Attempting to charge the battery while the internal temperature is elevated will impair battery performance, and the battery may not charge or charge only partially. Wait for the battery to cool before charging.
- Charge the battery indoors at ambient temperatures of 5 °C–35 °C (41 °F–95 °F). Do not use the battery at ambient temperatures below 0 °C (32 °F) or above 40 °C (104 °F); failure to observe this precaution could damage the battery or impair its performance. Capacity may be reduced and charging times may increase at battery temperatures from 0 °C (32 °F) to 15 °C (59 °F) and from 45 °C (113 °F) to 60 °C (140 °F). The battery will not charge if its temperature is below 0 °C (32 °F) or above 60 °C (140 °F).
- If the **CHARGE** lamp flashes quickly (about eight times a second) during charging, confirm that the temperature is in the correct range and then unplug the charger and remove and reinsert the battery. If the problem persists, cease use immediately and take battery and charger to your retailer or a Nikon-authorized service representative.
- Do not move the charger or touch the battery during charging. Failure to observe this precaution could in very rare instances result in the charger showing that charging is complete when the battery is only partially charged. Remove and reinsert the battery to begin charging again.
- Continuing to charge the battery after it is fully charged can impair battery performance.
- A marked drop in the time a fully charged battery retains its charge when used at room temperature indicates that it requires replacement. Purchase a new EN-EL14a battery.
- Use the charger with compatible batteries only. Unplug when not in use.



- Charge the battery before use. When taking photographs on important occasions, ready a spare battery and keep it fully charged. Depending on your location, it may be difficult to purchase replacement batteries on short notice. Note that on cold days, the capacity of batteries tends to decrease. Be sure the battery is fully charged before taking photographs outside in cold weather. Keep a spare battery in a warm place and exchange the two as necessary. Once warmed, a cold battery may recover some of its charge.
- Used batteries are a valuable resource; recycle in accord with local regulations.




#### **Servicing the Camera and Accessories**







The camera is a precision device and requires regular servicing. Nikon recommends that the camera be inspected by the original retailer or Nikon-authorized service representative once every one to two years, and that it be serviced once every three to five years (note that fees apply to these services). Frequent inspection and servicing are particularly recommended if the camera is used professionally. Any accessories regularly used with the camera, such as lenses or optional flash units, should be included when the camera is inspected or serviced.

## Error Messages




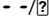







This section lists the indicators and error messages that appear in the viewfinder and monitor.

### Warning Icons

A flashing  in the monitor or  in the viewfinder indicates that a warning or error message can be displayed in the monitor by pressing the  (?) button.

| Indicator  |  | Solution   |
|--|--|--|
| Monitor  | Viewfinder   |  |
| Lock lens aperture ring at minimum aperture (largest f/-number).               | <br>(flashes)   | Set lens aperture ring to minimum aperture (highest f-number).   |
| Lens not attached  | <br>(flashes)   | <ul style="list-style-type: none"><li>• Attach non-IX NIKKOR lens.</li><li>• If non-CPU lens is attached, select mode M.</li></ul>   |
| Before taking photos, rotate the zoom ring to extend the lens.                 | <br>(flashes)   | A lens with a retractable lens barrel button is attached with the lens barrel retracted. Press the retractable lens barrel button and rotate the zoom ring to extend the lens. |
| Shutter release disabled. Recharge battery.                                    | <br>(flashes)   | Turn camera off and recharge or replace battery.   |
| This battery cannot be used. Choose battery designated for use in this camera. | <br>(flashes) | Use Nikon-approved battery.  |
| Initialization error. Turn camera off and then on again.                       | <br>(flashes) | Turn camera off, remove and replace battery, and then turn camera on again.  |

| Indicator  |                           | Solution   |
|--|---------------------------|--|
| Monitor  | Viewfinder                |  |
| Battery level is low. Complete operation and turn camera off immediately.  | —                         | End cleaning and turn camera off and recharge or replace battery.  |
| Clock not set  | —                         | Set camera clock.  |
| No memory card inserted  | { - E - } / [?] (flashes) | Turn camera off and confirm that card is correctly inserted.   |
| Memory card is locked. Slide lock to “write” position.                     | Ⓛ d (flashes)             | Memory card is locked (write protected). Slide card write-protect switch to “write” position.  |
| This memory card cannot be used. Card may be damaged. Insert another card. | Ⓛ d / { E r r } (flashes) | <ul style="list-style-type: none"> <li>• Use approved card.</li> <li>• Format card. If problem persists, card may be damaged. Contact Nikon-authorized service representative.</li> <li>• Error creating new folder. Delete files or insert new memory card.</li> <li>• Insert new memory card.</li> </ul> |
| This card is not formatted. Format the card.                               | { F o r } (flashes)       | Format card or turn camera off and insert new memory card.   |
| Card is full   | F u l / [?] (flashes)     | <ul style="list-style-type: none"> <li>• Reduce quality or size.</li> <li>• Delete photographs.</li> <li>• Insert new memory card.</li> </ul>  |
| —  | ● (flashes)               | Camera can not focus using autofocus. Change composition or focus manually.  |

| Indicator             |  | Solution   |
|-----------------------|--|--|
| Monitor               | Viewfinder   |  |
| Subject is too bright | <br>(flashes)   | <ul style="list-style-type: none"> <li>• Use a lower ISO sensitivity.</li> <li>• Use commercial ND filter.</li> <li>• In mode:               <ul style="list-style-type: none"> <li><b>S</b> Increase shutter speed</li> <li><b>A</b> Choose a smaller aperture (higher f-number)</li> <li> Choose another shooting mode</li> </ul> </li> </ul> |
| Subject is too dark   |  | <ul style="list-style-type: none"> <li>• Use a higher ISO sensitivity.</li> <li>• Use flash.</li> <li>• In mode:               <ul style="list-style-type: none"> <li><b>S</b> Lower shutter speed</li> <li><b>A</b> Choose a larger aperture (lower f-number)</li> </ul> </li> </ul>  |
| No “Bulb” in S mode   |    <br>(flashes) | Change shutter speed or select mode <b>M</b> .   |
| No “Time” in S mode   |  <br>(flashes)   |  |
| —                     | <br>(flashes)   | Flash has fired at full power. Check photo in monitor; if underexposed, adjust settings and try again.   |
| —                     |  <br>(flashes)   | <ul style="list-style-type: none"> <li>• Use the flash.</li> <li>• Change distance to subject, aperture, flash range, or ISO sensitivity.</li> <li>• Lens focal length is less than 18 mm: use a longer focal length.</li> </ul>   |

| Indicator   |                  | Solution  |
|---|------------------|---|
| Monitor   | Viewfinder       |   |
| <b>Error. Press shutter release button again.</b>                         | Err<br>(flashes) | Release shutter. If error persists or appears frequently, consult Nikon-authorized service representative.  |
| <b>Start-up error. Contact a Nikon-authorized service representative.</b> |                  | Consult Nikon-authorized service representative.  |
| <b>Metering error</b>   |                  |   |
| <b>Unable to start live view. Please wait for camera to cool.</b>         | —                | Wait for the internal circuits to cool before resuming live view or movie recording.  |
| <b>Folder contains no images.</b>   | —                | Folder selected for playback contains no images. Select folder containing images from <b>Playback folder</b> menu or insert memory card containing images.    |
| <b>Cannot display this file.</b>  | —                | File can not be played back on camera.  |
| <b>Cannot select this file.</b>   | —                | Images created with other devices can not be retouched.   |
| <b>This movie cannot be edited.</b>                                       | —                | <ul style="list-style-type: none"> <li>• Movies created with other devices can not be edited.</li> <li>• Movies must be at least two seconds long.</li> </ul> |
| <b>No image for retouching.</b>   | —                | Memory card does not contain NEF (RAW) images for use with <b>NEF (RAW) processing</b> .  |

| Indicator  |            | Solution   |
|--|------------|--|
| Monitor  | Viewfinder |  |
| Could not connect; multiple devices detected. Try again later. | —          | Multiple smart devices are attempting to connect to camera simultaneously. Wait a few minutes before trying again. |
| Error  | —          | Select <b>Disable</b> for <b>Wi-Fi &gt; Network connection</b> , then select <b>Enable</b> again.                  |
| Network access not available until camera cools.               | —          | Turn camera off and try again after waiting for camera to cool.  |

# Specifications

## ■ Nikon D5500 Digital Camera










| Type                    |  |
|-------------------------|--|
| Type                    | Single-lens reflex digital camera  |
| Lens mount              | Nikon F mount (with AF contacts)   |
| Effective angle of view | Nikon DX format; focal length equivalent to approx. 1.5× that of lenses with FX format angle of view   |
| Effective pixels        |  |
| Effective pixels        | 24.2 million   |
| Image sensor            |  |
| Image sensor            | 23.5 × 15.6 mm CMOS sensor   |
| Total pixels            | 24.78 million  |
| Dust-reduction System   | Image sensor cleaning, Image Dust Off reference data (Capture NX-D software required)  |
| Storage                 |  |
| Image size (pixels)     | <ul style="list-style-type: none"><li>• 6000 × 4000 (Large)</li><li>• 4496 × 3000 (Medium)</li><li>• 2992 × 2000 (Small)</li></ul>   |
| File format             | <ul style="list-style-type: none"><li>• <b>NEF (RAW)</b>: 12- or 14 bit, compressed</li><li>• <b>JPEG</b>: JPEG-Baseline compliant with fine (approx. 1 : 4), normal (approx. 1 : 8), or basic (approx. 1 : 16) compression</li><li>• <b>NEF (RAW)+JPEG</b>: Single photograph recorded in both NEF (RAW) and JPEG formats</li></ul> |
| Picture Control System  | Standard, Neutral, Vivid, Monochrome, Portrait, Landscape, Flat; selected Picture Control can be modified; storage for custom Picture Controls   |
| Media                   | SD (Secure Digital) and UHS-I compliant SDHC and SDXC memory cards   |
| File system             | DCF 2.0, DPOF, Exif 2.3, PictBridge  |

| Viewfinder                |  |
|---------------------------|--|
| <b>Viewfinder</b>         | Eye-level pentamirror single-lens reflex viewfinder                              |
| <b>Frame coverage</b>     | Approx. 95% horizontal and 95% vertical  |
| <b>Magnification</b>      | Approx. 0.82× (50 mm f/1.4 lens at infinity, $-1.0 \text{ m}^{-1}$ )             |
| <b>Eyepoint</b>           | 17 mm ( $-1.0 \text{ m}^{-1}$ ; from center surface of viewfinder eyepiece lens) |
| <b>Diopter adjustment</b> | $-1.7 - +0.5 \text{ m}^{-1}$   |
| <b>Focusing screen</b>    | Type B BriteView Clear Matte Mark VII screen                                     |
| <b>Reflex mirror</b>      | Quick return   |
| <b>Lens aperture</b>      | Instant return, electronically controlled  |


| Lens                     |  |
|--------------------------|--|
| <b>Compatible lenses</b> | <p>Autofocus is available AF-S, AF-P, and AF-I lenses. Autofocus is not available with other type G and D lenses, AF lenses (IX NIKKOR and lenses for the F3AF are not supported), and AI-P lenses. Non-CPU lenses can be used in mode <b>M</b>, but the camera exposure meter will not function.</p> <p>The electronic rangefinder can be used with lenses that have a maximum aperture of f/5.6 or faster.</p> |



| Shutter                 |  |
|-------------------------|--|
| <b>Type</b>             | Electronically-controlled vertical-travel focal-plane shutter                    |
| <b>Speed</b>            | $1/4000 - 30 \text{ s}$ in steps of $1/3$ or $1/2 \text{ EV}$ ; Bulb; Time       |
| <b>Flash sync speed</b> | $X = 1/200 \text{ s}$ ; synchronizes with shutter at $1/200 \text{ s}$ or slower |



| Release                                  |   |
|--|---|
| Release mode                             |  (single frame),  L (continuous L),  H (continuous H),  (quiet shutter release),  (self-timer),  2s (delayed remote; ML-L3),  (quick-response remote; ML-L3); interval timer photography supported |
| Frame advance rate                       | <ul style="list-style-type: none"> <li>•  L: Up to 3 fps</li> <li>•  H: Up to 5 fps (JPEG and 12-bit NEF/RAW) or 4 fps (14-bit NEF/RAW)</li> </ul> <p><b>Note:</b> Frame rates assume continuous-servo AF, manual or shutter-priority auto exposure, a shutter speed of <math>\frac{1}{250}</math> s or faster, <b>Release</b> selected for Custom Setting a1 (<b>AF-C priority selection</b>), and other settings at default values.</p>   |
| Self-timer                               | 2 s, 5 s, 10 s, 20 s; 1–9 exposures   |
| Exposure                                 |   |
| Metering mode                            | TTL exposure metering using 2016-pixel RGB sensor   |
| Metering method                          | <ul style="list-style-type: none"> <li>• <b>Matrix metering:</b> 3D color matrix metering II (type G, E, and D lenses); color matrix metering II (other CPU lenses)</li> <li>• <b>Center-weighted metering:</b> Weight of 75% given to 8-mm circle in center of frame</li> <li>• <b>Spot metering:</b> Meters 3.5-mm circle (about 2.5% of frame) centered on selected focus point</li> </ul>   |
| Range (ISO 100, f/1.4 lens, 20 °C/68 °F) | <ul style="list-style-type: none"> <li>• <b>Matrix or center-weighted metering:</b> 0–20 EV</li> <li>• <b>Spot metering:</b> 2–20 EV</li> </ul>   |
| Exposure meter coupling                  | CPU   |

| Exposure  |   |
|---|---|
| <b>Mode</b>   | Auto modes (AUTO auto;  auto, flash off); programmed auto with flexible program (P); shutter-priority auto (S); aperture-priority auto (A); manual (M); scene modes ( portrait;  landscape;  child;  sports;  close up;  night portrait;  night landscape;  party/indoor;  beach/snow;  sunset;  dusk/dawn;  pet portrait;  candlelight;  blossom;  autumn colors;  food); special effects modes ( night vision;  VI super vivid;  POP pop;  photo illustration;  toy camera effect;  miniature effect;  selective color;  silhouette;  high key;  low key) |
| <b>Exposure compensation</b>                        | Can be adjusted by -5 – +5 EV in increments of 1/3 or 1/2 EV in P, S, A, M, SCENE, and  modes   |
| <b>Exposure bracketing</b>                          | 3 shots in steps of 1/3 or 1/2 EV   |
| <b>White balance bracketing</b>                     | 3 shots in steps of 1   |
| <b>ADL bracketing</b>                               | 2 shots   |
| <b>Exposure lock</b>                                | Luminosity locked at detected value with <small>AE-L</small> <small>AF-L</small> ( button)  |
| <b>ISO sensitivity (Recommended Exposure Index)</b> | ISO 100 – 25600 in steps of 1/3 EV. Auto ISO sensitivity control available  |
| <b>Active D-Lighting</b>                            | A Auto,  H+ Extra high,  H High,  N Normal,  L Low, OFF Off   |
| Focus   |   |
| <b>Autofocus</b>                                    | Nikon Multi-CAM 4800DX autofocus sensor module with TTL phase detection, 39 focus points (including 9 cross-type sensor), and AF-assist illuminator (range approx. 0.5–3 m/ 1 ft 8 in.–9 ft 10 in.)   |
| <b>Detection range</b>                              | -1 – +19 EV (ISO 100, 20 °C/68 °F)  |

| Focus                        |  |
|------------------------------|--|
| <b>Lens servo</b>            | <ul style="list-style-type: none"> <li>• <b>Autofocus (AF):</b> Single-servo AF (<b>AF-S</b>); continuous-servo AF (<b>AF-C</b>); auto AF-S/AF-C selection (<b>AF-A</b>); predictive focus tracking activated automatically according to subject status</li> <li>• <b>Manual focus (MF):</b> Electronic rangefinder can be used</li> </ul> |
| <b>Focus point</b>           | Can be selected from 39 or 11 focus points   |
| <b>AF-area mode</b>          | Single-point AF, 9-, 21-, or 39- point dynamic-area AF, 3D-tracking, auto-area AF  |
| <b>Focus lock</b>            | Focus can be locked by pressing shutter-release button halfway (single-servo AF) or by pressing <sup>AE-L</sup> <sub>AF-L</sub> ( <b>○m</b> ) button   |
| Flash                        |  |
| <b>Built-in flash</b>        |  : Auto flash with auto pop-up<br><b>P, S, A, M, 1f</b> : Manual pop-up with button release   |
| <b>Guide Number</b>          | Approx. 12/39, 12/39 with manual flash (m/ft, ISO 100, 20 °C/68 °F)  |
| <b>Flash control</b>         | <b>TTL:</b> i-TTL flash control using 2016-pixel RGB sensor is available with built-in flash; i-TTL balanced fill-flash for digital SLR is used with matrix and center-weighted metering, standard i-TTL flash for digital SLR with spot metering  |
| <b>Flash mode</b>            | Auto, auto with red-eye reduction, auto slow sync, auto slow sync with red-eye reduction, fill-flash, red-eye reduction, slow sync, slow sync with red-eye reduction, rear-curtain with slow sync, rear-curtain sync, off  |
| <b>Flash compensation</b>    | Can be adjusted by -3 – +1 EV in increments of 1/3 or 1/2 EV in <b>P, S, A, M</b> , and <b>SCENE</b> modes   |
| <b>Flash-ready indicator</b> | Lights when built-in flash or optional flash unit is fully charged; blinks after flash is fired at full output   |

| Flash                                       |   |
|---|---|
| <b>Accessory shoe</b>                       | ISO 518 hot-shoe with sync and data contacts and safety lock  |
| <b>Nikon Creative Lighting System (CLS)</b> | Advanced Wireless Lighting supported with SB-910, SB-900, SB-800, SB-700, or SB-500 as a master flash or SU-800 as commander; Flash Color Information Communication supported with all CLS-compatible flash units |
| <b>Sync terminal</b>                        | AS-15 sync terminal adapter (available separately)  |
| White balance                               |   |
| <b>White balance</b>                        | Auto, incandescent, fluorescent (7 types), direct sunlight, flash, cloudy, shade, preset manual, all except preset manual with fine-tuning.   |
| Live view                                   |   |
| <b>Lens servo</b>                           | <ul style="list-style-type: none"> <li>• <b>Autofocus (AF):</b> Single-servo AF (<b>AF-S</b>); full-time-servo AF (<b>AF-F</b>)</li> <li>• <b>Manual focus (MF)</b></li> </ul>                                    |
| <b>AF-area mode</b>                         | Face-priority AF, wide-area AF, normal-area AF, subject-tracking AF   |
| <b>Autofocus</b>                            | Contrast-detect AF anywhere in frame (camera selects focus point automatically when face-priority AF or subject-tracking AF is selected)  |
| <b>Automatic scene selection</b>            | Available in  and  modes                        |
| Movie                                       |   |
| <b>Metering</b>                             | TTL exposure metering using main image sensor   |
| <b>Metering method</b>                      | Matrix  |

| <b>Movie</b>                              |   |
|---|---|
| <b>Frame size (pixels) and frame rate</b> | <ul style="list-style-type: none"> <li>• 1920 × 1080, 60p (progressive)/50p/30p/25p/24p, ★ high/normal</li> <li>• 1280 × 720, 60p/50p, ★ high/normal</li> <li>• 640 × 424, 30p/25p, ★ high/normal</li> </ul> <p>Frame rates of 30p (actual frame rate 29.97 fps) and 60p (actual frame rate 59.94 fps) are available when <b>NTSC</b> is selected for video mode. 25p and 50p are available when <b>PAL</b> is selected for video mode. Actual frame rate when 24p is selected is 23.976 fps.</p> |
| <b>File format</b>                        | MOV   |
| <b>Video compression</b>                  | H.264/MPEG-4 Advanced Video Coding  |
| <b>Audio recording format</b>             | Linear PCM  |
| <b>Audio recording device</b>             | Built-in or external stereo microphone; sensitivity adjustable  |
| <b>ISO sensitivity</b>                    | ISO 100–25600   |
| <b>Monitor</b>                            |   |
| <b>Monitor</b>                            | 8.1 cm/3.2-in. (3 : 2), approx. 1037k-dot (720 × 480 × 3 = 1,036,800 dots), TFT vari-angle LCD touch screen with 170 ° viewing angle, approx. 100% frame coverage, brightness adjustment, and eye-sensor controlled on/off  |
| <b>Playback</b>                           |   |
| <b>Playback</b>                           | Full-frame and thumbnail (4, 12, or 80 images or calendar) playback with playback zoom, movie playback, photo and/or movie slide shows, histogram display, highlights, photo information, location data display, auto image rotation, picture rating, and image comment (up to 36 characters)   |

| Interface                       |   |
|---------------------------------|---|
| <b>USB</b>                      | Hi-Speed USB; connection to built-in USB port is recommended  |
| <b>Video output</b>             | NTSC, PAL   |
| <b>HDMI output</b>              | Type C HDMI connector   |
| <b>Accessory terminal</b>       | <p><b>Wireless remote controllers:</b> WR-1, WR-R10 (available separately)</p> <p><b>Remote cords:</b> MC-DC2 (available separately)</p> <p><b>GPS units:</b> GP-1/GP-1A (available separately)</p> |
| <b>Audio input</b>              | Stereo mini-pin jack (3.5 mm diameter); supports optional ME-1 stereo microphones   |
| Wireless                        |   |
| <b>Standards</b>                | IEEE 802.11b, IEEE 802.11g  |
| <b>Communications protocols</b> | <ul style="list-style-type: none"> <li>• <b>IEEE 802.11b:</b> DSSS/CCK</li> <li>• <b>IEEE 802.11g:</b> OFDM</li> </ul>  |
| <b>Operating frequency</b>      | 2412–2462 MHz (channels 1–11)   |
| <b>Range (line of sight)</b>    | Approximately 30 m/98 ft (assumes no interference; range may vary with signal strength and presence or absence of obstacles)  |
| <b>Data rate</b>                | <p>54 Mbps</p> <p>Maximum logical data rates according to IEEE standard. Actual rates may differ.</p>   |
| <b>Security</b>                 | <ul style="list-style-type: none"> <li>• <b>Authentication:</b> Open system, WPA2-PSK</li> <li>• <b>Encryption:</b> AES</li> </ul>  |
| <b>Wireless setup</b>           | Supports WPS  |
| <b>Access protocols</b>         | Infrastructure  |

## Supported languages

|                            |  |
|----------------------------|--|
| <b>Supported languages</b> | Arabic, Bengali, Bulgarian, Chinese (Simplified and Traditional), Czech, Danish, Dutch, English, Finnish, French, German, Greek, Hindi, Hungarian, Indonesian, Italian, Japanese, Korean, Marathi, Norwegian, Persian, Polish, Portuguese (Portugal and Brazil), Romanian, Russian, Serbian, Spanish, Swedish, Tamil, Telugu, Thai, Turkish, Ukrainian, Vietnamese |
|----------------------------|--|

## Power source

|                   |   |
|-------------------|---|
| <b>Battery</b>    | One EN-EL14a rechargeable Li-ion battery                                |
| <b>AC adapter</b> | EH-5b AC adapter; requires EP-5A power connector (available separately) |

## Tripod socket

|                      |                    |
|----------------------|--------------------|
| <b>Tripod socket</b> | 1/4 in. (ISO 1222) |
|----------------------|--------------------|

## Dimensions/weight

|                               |   |
|-------------------------------|---|
| <b>Dimensions (W × H × D)</b> | Approx. 124 × 97 × 70 mm (4.9 × 3.9 × 2.8 in.)  |
| <b>Weight</b>                 | Approx. 470 g (1 lb 0.6 oz) with battery and memory card but without body cap; approx. 420 g/14.9 oz (camera body only) |

## Operating environment

|                    |                               |
|--------------------|-------------------------------|
| <b>Temperature</b> | 0 °C–40 °C (+32 °F–104 °F)    |
| <b>Humidity</b>    | 85% or less (no condensation) |

- Unless otherwise stated, all measurements are performed in conformity with Camera and Imaging Products Association (CIPA) standards or guidelines.
- All figures are for a camera with a fully-charged battery.
- Nikon reserves the right to change the appearance and specifications of the hardware and software described in this manual at any time and without prior notice. Nikon will not be held liable for damages that may result from any mistakes that this manual may contain.

### ■ ■ *MH-24 Battery Charger*

|                               |   |
|-------------------------------|---|
| <b>Rated input</b>            | AC 100–240 V, 50/60 Hz, 0.2 A maximum   |
| <b>Rated output</b>           | DC 8.4 V/0.9 A  |
| <b>Supported batteries</b>    | Nikon Rechargeable Li-ion Battery EN-EL14a  |
| <b>Charging time</b>          | Approx. 1 hour and 50 minutes at an ambient temperature of 25 °C (77 °F) when no charge remains |
| <b>Operating temperature</b>  | 0 °C–40 °C (+32 °F–104 °F)  |
| <b>Dimensions (W × H × D)</b> | Approx. 70 × 26 × 97 mm (2.8 × 1.0 × 3.8 in.), excluding plug adapter                           |
| <b>Weight</b>                 | Approx. 96 g (3.4 oz), excluding plug adapter   |

### ■ ■ *EN-EL14a Rechargeable Li-ion Battery*

|                               |   |
|-------------------------------|---|
| <b>Type</b>                   | Rechargeable lithium-ion battery                |
| <b>Rated capacity</b>         | 7.2 V/1230 mAh                                  |
| <b>Operating temperature</b>  | 0 °C–40 °C (+32 °F–104 °F)                      |
| <b>Dimensions (W × H × D)</b> | Approx. 38 × 53 × 14 mm (1.5 × 2.1 × 0.6 in.)   |
| <b>Weight</b>                 | Approx. 49 g (1.7 oz), excluding terminal cover |



## ■ AF-P DX NIKKOR 18–55mm f/3.5–5.6G VR and AF-P DX NIKKOR 18–55mm f/3.5–5.6G Lenses

|   |   |
|---|---|
| Type  | Type G AF-P DX lens with built-in CPU and F mount   |
| Focal length  | 18–55 mm  |
| Maximum aperture  | f/3.5–5.6   |
| Lens construction   | 12 elements in 9 groups (2 aspherical lens elements)  |
| Angle of view   | 76° – 28° 50'   |
| Focal length scale  | Graduated in millimeters (18, 24, 35, 45, 55)   |
| Distance information  | Output to camera  |
| Zoom  | Manual zoom using independent zoom ring   |
| Focusing  | Autofocus controlled by stepping motor; separate focus ring for manual focus  |
| Vibration reduction (AF-P DX NIKKOR 18–55mm f/3.5–5.6G VR only) | Lens shift using voice coil motors (VCMs)   |
| Minimum focus distance  | 0.25 m (0.9 ft) from focal plane at all zoom positions  |
| Diaphragm blades  | 7 (rounded diaphragm opening)   |
| Diaphragm   | Fully automatic   |
| Aperture range  | <ul style="list-style-type: none"> <li>• 18 mm focal length: f/3.5–22</li> <li>• 55 mm focal length: f/5.6–38</li> </ul> <p>The minimum aperture displayed may vary depending on the size of the exposure increment selected with the camera.</p> |
| Metering  | Full aperture   |
| Filter-attachment size  | 55 mm (P = 0.75 mm)   |
| Dimensions  | Approx. 64.5 mm maximum diameter × 62.5 mm (distance from camera lens mount flange when lens is retracted)  |
| Weight  | <ul style="list-style-type: none"> <li>• AF-P DX NIKKOR 18–55mm f/3.5–5.6G VR: Approx. 205 g (7.3 oz)</li> <li>• AF-P DX NIKKOR 18–55mm f/3.5–5.6G: Approx. 195 g (6.9 oz)</li> </ul>   |

## ■ AF-S DX NIKKOR 18–55mm f/3.5–5.6G VR II Lens

|                        |   |
|------------------------|---|
| Type                   | Type G AF-S DX lens with built-in CPU and F mount   |
| Focal length           | 18–55 mm  |
| Maximum aperture       | f/3.5–5.6   |
| Lens construction      | 11 elements in 8 groups (including 1 aspherical lens element)   |
| Angle of view          | 76 °–28 ° 50 ´  |
| Focal length scale     | Graduated in millimeters (18, 24, 35, 45, 55)   |
| Distance information   | Output to camera  |
| Zoom                   | Manual zoom using independent zoom ring   |
| Focusing               | Autofocus controlled by Silent Wave Motor and separate focus ring for manual focus  |
| Vibration reduction    | Lens shift using voice coil motors (VCMs)   |
| Minimum focus distance | <ul style="list-style-type: none"><li>• <b>AF:</b> 0.28 m (0.92 ft) from focal plane at all zoom positions</li><li>• <b>MF:</b> 0.25 m (0.82 ft) from focal plane at all zoom positions</li></ul>   |
| Diaphragm blades       | 7 (rounded diaphragm opening)   |
| Diaphragm              | Fully automatic   |
| Aperture range         | <ul style="list-style-type: none"><li>• <b>18 mm focal length:</b> f/3.5–22</li><li>• <b>55 mm focal length:</b> f/5.6–38</li></ul> The minimum aperture displayed may vary depending on the size of the exposure increment selected with the camera. |
| Metering               | Full aperture   |
| Filter-attachment size | 52 mm (P=0.75 mm)   |
| Dimensions             | Approx. 66 mm diameter × 59.5 mm (distance from camera lens mount flange when lens is retracted)  |
| Weight                 | Approx. 195 g (6.9 oz)  |

## ■ AF-S DX NIKKOR 18–140mm f/3.5–5.6G ED VR Lens


|                               |  |
|-------------------------------|--|
| <b>Type</b>                   | Type G AF-S DX lens with built-in CPU and F mount  |
| <b>Focal length</b>           | 18–140 mm  |
| <b>Maximum aperture</b>       | f/3.5–5.6  |
| <b>Lens construction</b>      | 17 elements in 12 groups (including 1 ED lens element, 1 aspherical lens element)  |
| <b>Angle of view</b>          | 76° – 11° 30′  |
| <b>Focal length scale</b>     | Graduated in millimeters (18, 24, 35, 50, 70, 140)   |
| <b>Distance information</b>   | Output to camera   |
| <b>Zoom</b>                   | Manual zoom using independent zoom ring  |
| <b>Focusing</b>               | Nikon Internal Focusing (IF) System with autofocus controlled by Silent Wave Motor and separate focus ring for manual focus  |
| <b>Vibration reduction</b>    | Lens shift using voice coil motors (VCMs)  |
| <b>Minimum focus distance</b> | 0.45 m (1.48 ft) from focal plane at all zoom positions  |
| <b>Diaphragm blades</b>       | 7 (rounded diaphragm opening)  |
| <b>Diaphragm</b>              | Fully automatic  |
| <b>Aperture range</b>         | <ul style="list-style-type: none"><li>• <b>18 mm focal length:</b> f/3.5–22</li><li>• <b>140 mm focal length:</b> f/5.6–38</li></ul> The minimum aperture displayed may vary depending on the size of the exposure increment selected with the camera. |
| <b>Metering</b>               | Full aperture  |
| <b>Filter-attachment size</b> | 67 mm (P = 0.75 mm)  |
| <b>Dimensions</b>             | Approx. 78 mm maximum diameter × 97 mm (distance from camera lens mount flange)  |
| <b>Weight</b>                 | Approx. 490 g (17.3 oz)  |

## ■ AF-S DX NIKKOR 55–200mm f/4–5.6G ED VR II Lens

|                        |   |
|------------------------|---|
| Type                   | Type G AF-S DX lens with built-in CPU and F mount   |
| Focal length           | 55–200 mm   |
| Maximum aperture       | f/4–5.6   |
| Lens construction      | 13 elements in 9 groups (including 1 ED lens element)   |
| Angle of view          | 28° 50' – 8°  |
| Focal length scale     | Graduated in millimeters (55, 70, 85, 105, 135, 200)  |
| Distance information   | Output to camera  |
| Zoom                   | Manual zoom using independent zoom ring   |
| Focusing               | Nikon Internal Focusing (IF) System with autofocus controlled by Silent Wave Motor and separate focus ring for manual focus |
| Vibration reduction    | Lens shift using voice coil motors (VCMs)   |
| Minimum focus distance | 1.1 m (3.7 ft) from focal plane at all zoom positions   |
| Diaphragm blades       | 7 (rounded diaphragm opening)   |
| Diaphragm              | Fully automatic   |
| Aperture range         | <ul style="list-style-type: none"><li>• 55 mm focal length: f/4–22</li><li>• 200 mm focal length: f/5.6–32</li></ul>        |
| Metering               | Full aperture   |
| Filter-attachment size | 52 mm (P = 0.75 mm)   |
| Dimensions             | Approx. 70.5 mm maximum diameter × 83 mm (distance from camera lens mount flange when lens is retracted)                    |
| Weight                 | Approx. 300 g (10.6 oz)   |


Nikon reserves the right to change the appearance and specifications of the hardware and software described in this manual at any time and without prior notice. Nikon will not be held liable for damages that may result from any mistakes that this manual may contain.

**AF-P DX NIKKOR 18–55mm f/3.5–5.6G VR, AF-P DX NIKKOR 18–55mm f/3.5–5.6G**  
AF-P DX NIKKOR 18–55mm f/3.5–5.6G VR and AF-P DX NIKKOR 18–55mm f/3.5–5.6G feature retractable lens barrels.

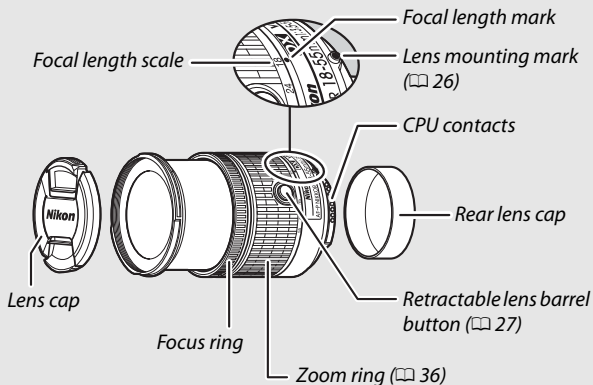


## **AF-S DX NIKKOR 18–55mm f/3.5–5.6G VR II**

The lens generally used in this manual for illustrative purposes is the AF-S DX NIKKOR 18–55mm f/3.5–5.6G VR II, which features a retractable lens barrel.

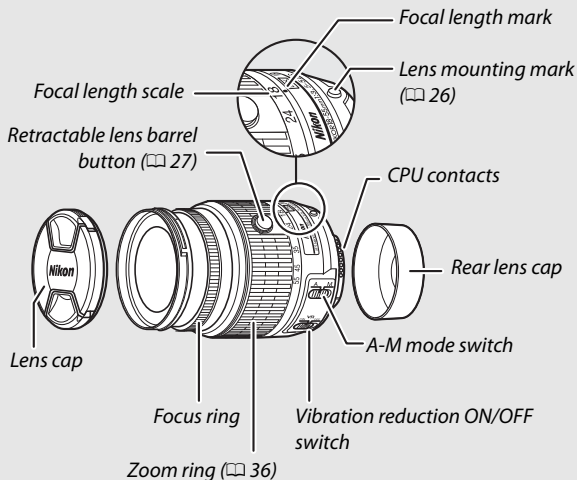


### AF-S DX NIKKOR 18–140mm f/3.5–5.6G ED VR

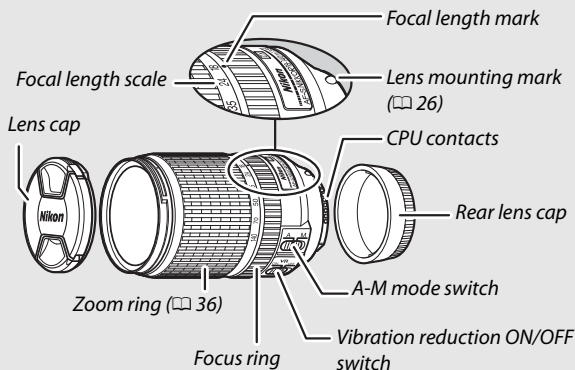

### AF-S DX NIKKOR 55–200mm f/4–5.6G ED VR II

The AF-S DX NIKKOR 55–200mm f/4–5.6G ED VR II features a retractable lens barrel.

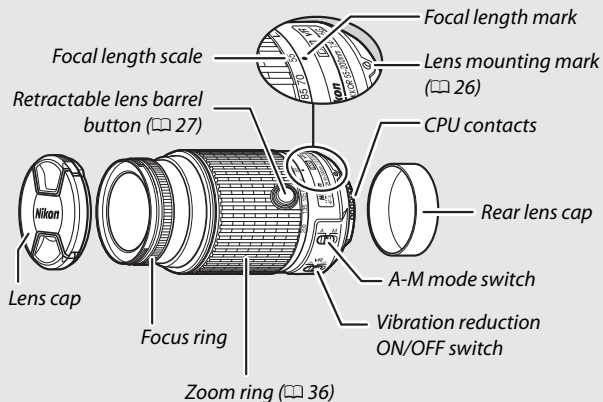

### **Trademark Information**

IOS is a trademark or registered trademark of Cisco Systems, Inc., in the United States and/or other countries and is used under license.

Windows is either a registered trademark or a trademark of Microsoft Corporation in the United States and/or other countries. PictBridge logo is a trademark. The SD, SDHC, and SDXC logos are trademarks of the SD-3C, LLC. HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC.

## **HDMI**

Wi-Fi and the Wi-Fi logo are trademarks or registered trademarks of the Wi-Fi Alliance. All other trade names mentioned in this manual or the other documentation provided with your Nikon product are trademarks or registered trademarks of their respective holders.

### **Conformity Marking**

The standards with which the camera complies can be viewed using the **Conformity marking** option in the setup menu (□ 87).

### **FreeType License (FreeType2)**

Portions of this software are copyright © 2012 The FreeType Project (<http://www.freetype.org>). All rights reserved.

### **MIT License (HarfBuzz)**

Portions of this software are copyright © 2014 The HarfBuzz Project (<http://www.freedesktop.org/wiki/Software/HarfBuzz>). All rights reserved.



## Certificates

### • Indonesia

36708/SDPPI/2014  
4588

36709/SDPPI/2014  
4593

### • México

COFETEL: RCPMULB13-0954  
LBWA1U5YR1

### • Paraguay

Número del Registro: 2014-01-I-00028

Este producto contiene un transmisor  
aprobado por la CONATEL.

### • Brasil



• الأردن

TRC/LPD/2013/141

• عُمان

|           |
|-----------|
| OMAN-TRA  |
| R/2185/14 |
| D080093   |

• الإمارات العربية المتحدة

|                |
|----------------|
| TRA            |
| REGISTERED No: |
| ER0112542/13   |
| DEALER No:     |
| DA0073692/11   |

## Battery Life

The movie footage or number of shots that can be recorded with fully-charged batteries varies with the condition of the battery, temperature, the interval between shots, and the length of time menus are displayed. Sample figures for EN-EL14a (1230 mAh) batteries are given below.

- **Photographs, single-frame release mode (CIPA standard <sup>1</sup>):**  
Approximately 820 shots
- **Photographs, continuous release mode (Nikon standard <sup>2</sup>):**  
Approximately 3110 shots
- **Movies:** Approximately 65 minutes at 1080/60p and 1080/50p <sup>3</sup>
  - 1 Measured at 23 °C/73.4 °F ( $\pm 2$  °C/3.6 °F) with an AF-S DX NIKKOR 18–55mm f/3.5–5.6G VR II lens under the following test conditions: lens cycled from infinity to minimum range and one photograph taken at default settings once every 30 s; after photograph is taken, monitor is turned on; tester waits for monitor to turn off; flash fired at full power once every other shot. Live view not used.
  - 2 Measured at 20 °C/68 °F with an AF-S DX NIKKOR 18–55mm f/3.5–5.6G VR II lens under the following test conditions: vibration reduction off, continuous high-speed release mode, focus mode set to **AF-C**, image quality set to JPEG basic, image size set to **M** (medium), white balance set to **Auto**, ISO sensitivity set to ISO 100, shutter speed  $1/250$  s, focus cycled from infinity to minimum range three times after shutter-release button has been pressed halfway for 3 s; six shots are then taken in succession and monitor turned on; cycle repeated once monitor has turned off.
  - 3 Measured at 23 °C/73.4 °F ( $\pm 2$  °C/3.6 °F) with the camera at default settings and an AF-S DX NIKKOR 18–55mm f/3.5–5.6G VR II lens under conditions specified by the Camera and Imaging Products Association (CIPA). Individual movies can be up to 20 minutes in length or 4 GB in size; recording may end before these limits are reached if the camera temperature rises.

The following can reduce battery life:

- Using the monitor
- Keeping the shutter-release button pressed halfway
- Repeated autofocus operations
- Taking NEF (RAW) photographs
- Slow shutter speeds
- Using the built-in Wi-Fi function or using an optional GP-1 or GP-1A GPS unit or WR-R10/WR-1 wireless remote controller
- Using an Eye-Fi card
- Using VR (vibration reduction) mode with VR lenses
- Repeatedly zooming in and out with an AF-P lens.

To ensure that you get the most from rechargeable Nikon EN-EL14a batteries:

- Keep the battery contacts clean. Soiled contacts can reduce battery performance.
- Use batteries immediately after charging. Batteries will lose their charge if left unused.



No reproduction in any form of this manual, in whole or in part (except for brief quotation in critical articles or reviews), may be made without written authorization from NIKON CORPORATION.

**NIKON CORPORATION**

---

© 2015 Nikon Corporation

Printed in Singapore



SB5L02(11)  
6MB26211-02